

Filter Objects

Introduction

A **Filter** object manages a single filter on a controller. It represents the control algorithm used to control a motor in a closed-loop system. The Filter contains an algorithm, a set of coefficients, inputs, and an output. Its primary responsibility is to take the difference between the command and actual positions and then calculate the output based on the control algorithm and coefficients.

For simple systems, there is a one-to-one relationship between the Axis, Filter, and Motor objects.

| [Error Messages](#) |

Methods

Create, Delete, Validate Methods

mpiFilterCreate	Create Filter object
mpiFilterDelete	Delete Filter object
mpiFilterValidate	Validate Filter object

Configuration and Information Methods

mpiFilterConfigGet	Get Filter configuration
mpiFilterConfigSet	Set Filter configuration
mpiFilterFlashConfigGet	Get flash configuration for Filter
mpiFilterFlashConfigSet	Set flash configuration for Filter
mpiFilterGainGet	Get gain coefficients
mpiFilterGainSet	Set current gain index
mpiFilterGainIndexGet	Get current gain index
mpiFilterGainIndexSet	Set current gain index

Memory Methods

mpiFilterMemory	Get address to Filter memory
mpiFilterMemoryGet	Copy data from Filter memory to application memory
mpiFilterMemorySet	Copy data from application memory to Filter memory

Relational Methods

mpiFilterAxisMapGet	Get object map of axes associated with Filter
mpiFilterAxisMapSet	Set axes associated with Filter
mpiFilterControl	Return handle of Control that is associated with Filter
mpiFilterMotorMapGet	Get object map of Motors associated with Filter
mpiFilterMotorMapSet	Set Motors to be associated with Filter

[mpiFilterNumber](#)

Get index of Filter (for Control list)

Action Methods[mpiFilterIntegratorReset](#)

Reset the integrators of filter.

Postfilter Methods[meiFilterPostfilterGet](#)

Reads postfilter information.

[meiFilterPostfilterSet](#)

Writes postfilter information.

[meiFilterPostfilterSectionGet](#)

Reads postfilter section information.

[meiFilterPostfilterSectionSet](#)

Writes postfilter section information.

Data Types[MPIFilterCoeff](#)[MPIFilterConfig](#) / [MEIFilterConfig](#)[MEIFilterForm](#)[MPIFilterGain](#)[MEIFilterGainIndex](#)[MEIFilterGainPID](#)[MEIFilterGainPIDCoeff](#)[MEIFilterGainPIV](#)[MEIFilterGainPIVCoeff](#)[MEIFilterGainTypePID](#)[MEIFilterGainTypePIV](#)[MPIFilterMessage](#)[MEIFilterType](#)[MEIPostfilterSection](#)**Constants**[MPIFilterCoeffCOUNT_MAX](#)[MPIFilterGainCOUNT_MAX](#)[MEIMaxBiQuadSections](#)

mpiFilterCreate

Declaration

```
MPIFilter mpiFilterCreate(MPIControl control,  
                           long number)
```

Required Header: stdmpi.h

Description

mpiFilterCreate creates a Filter object associated with a filter (***number***), that is located on a motion controller (***control***). FilterCreate is the equivalent of a C++ constructor.

Return Values

handle	to an Filter object
MPIHandleVOID	if the Filter object could not be created

See Also

[mpiFilterDelete](#) | [mpiFilterValidate](#)

mpiFilterDelete

Declaration

```
long mpiFilterDelete(MPIFilter filter)
```

Required Header: stdmpi.h

Description

mpiFilterDelete deletes a Filter object and invalidates its handle (*filter*). FilterDelete is the equivalent of a C++ destructor.

Return Values

[MPIMessageOK](#)

See Also

[mpiFilterCreate](#) | [mpiFilterValidate](#)

mpiFilterValidate

Declaration

```
long mpiFilterValidate(MPIFilter filter)
```

Required Header: stdmpi.h

Description

mpiFilterValidate validates the Filter object and its handle (*filter*).

Return Values

[MPIMessageOK](#)

See Also

[mpiFilterCreate](#) | [mpiFilterDelete](#)

mpiFilterConfigGet

Declaration

```
long mpiFilterConfigGet(MPIFilter      filter,
                       MPIFilterConfig *config,
                       void          *external)
```

Required Header: stdmpi.h

Description

mpiFilterConfigGet gets a Filter's (*filter*) configuration and writes it into the structure pointed to by *config*, and also writes it into the implementation-specific structure pointed to by *external* (if *external* is not NULL).

The Filter's configuration information in *external* is in addition to the Filter's configuration information in *config*, i.e, the Filter's configuration information in *config* and in *external* is not the same information. Note that *config* or *external* can be NULL (but not both NULL).

Remarks

external either points to a structure of type **MEIFilterConfig{}** or is NULL.

Return Values

[MPIMessageOK](#)

See Also

[mpiFilterConfigSet](#) | [MEIFilterConfig](#)

mpiFilterConfigSet

Declaration

```
long mpiFilterConfigSet(MPIFilter      filter,
                       MPIFilterConfig *config,
                       void          *external)
```

Required Header: stdmpi.h

Description

mpiFilterConfigSet sets a Filter's (*filter*) configuration using data from the structure pointed to by *config*, and from the implementation-specific structure pointed to by *external* (if *external* is not NULL).

The Filter's configuration information in *external* is in addition to the Filter's configuration information in *config*, i.e, the Filter's configuration information in *config* and in *external* is not the same information. Note that *config* or *external* can be NULL (but not both NULL).

Remarks

external either points to a structure of type `MEIFilterConfig{}` or is NULL.

Return Values

[MPIMessageOK](#)

See Also

[mpiFilterConfigGet](#) | [MEIFilterConfig](#)

mpiFilterFlashConfigGet

Declaration

```
long mpiFilterFlashConfigGet(MPIFilter      filter,
                             void            *flash,
                             MPIFilterConfig *config,
                             void            *external)
```

Required Header: stdmpi.h

Description

mpiFilterFlashConfigGet gets a Filter's (*filter*) flash configuration and writes it into the structure pointed to by *config*, and also writes it into the implementation-specific structure pointed to by *external* (if *external* is not NULL).

The Filter's flash configuration information in *external* is in addition to the Filter's flash configuration information in *config*, i.e., the flash configuration information in *config* and in *external* is not the same information. Note that *config* or *external* can be NULL (but not both NULL).

Remarks

external either points to a structure of type **MEIFilterConfig{}** or is NULL.

filter	a handle to a Filter object
*flash	<i>flash</i> is either an MEIFlash handle or MPIHandleVOID. If flash is MPIHandleVOID, an MEIFlash object will be created and deleted internally. Using MPIHandleVOID is recommended, as it simplifies code. If <i>flash</i> is a valid MEIFlash handle, then the MEIFlash object cache will be updated, but the actual write to controller flash will not occur. Use meiFlashMemoryFromFileType(...) to prompt the actual write to flash.
*config	a pointer to a configuration structure for the filter object of type MPIFilterConfig .
*external	a pointer to a configuration structure for the filter object of type MEIFilterConfig .

Return Values

[MPIMessageOK](#)

See Also

[MEIFlash](#) | [mpiFilterFlashConfigSet](#) | [MEIFilterConfig](#)

mpiFilterFlashConfigSet

Declaration

```
long mpiFilterFlashConfigSet(MPIFilter      filter,
                             void            *flash,
                             MPIFilterConfig *config,
                             void            *external)
```

Required Header: stdmpi.h

Description

mpiFilterFlashConfigSet sets a Filter's (*filter*) flash configuration using data from the structure pointed to by *config*, and also using data from the implementation-specific structure pointed to by *external* (if *external* is not NULL).

The Filter's flash configuration information in *external* is in addition to the Filter's flash configuration information in *config*, i.e., the flash configuration information in *config* and in *external* is not the same information. Note that *config* or *external* can be NULL (but not both NULL).

Remarks

external either points to a structure of type **MEIFilterConfig** or is NULL.

filter	a handle to a Filter object
*flash	<p><i>flash</i> is either an MEIFlash handle or MPIHandleVOID. If flash is MPIHandleVOID, an MEIFlash object will be created and deleted internally. Using MPIHandleVOID is recommended, as it simplifies code.</p> <p>If <i>flash</i> is a valid MEIFlash handle, then the MEIFlash object cache will be updated, but the actual write to controller flash will not occur. Use meiFlashMemoryFromFileType(...) to prompt the actual write to flash.</p>
*config	a pointer to a configuration structure for the filter object of type MPIFilterConfig .
*external	a pointer to a configuration structure for the filter object of type MEIFilterConfig .

Return Values

[MPIMessageOK](#)

See Also

[MEIFlash](#) | [mpiFilterFlashConfigGet](#) | [MEIFilterConfig](#)

mpiFilterGainGet

Declaration

```
long mpiFilterGainGet(MPIFilter filter,
                    long gainIndex,
                    MPIFilterGain *gain)
```

Required Header: stdmpi.h

Description

mpiFilterGainGet gets the gain coefficients of a Filter (*filter*, for the gain index specified by *gainIndex*) and writes them into the structure pointed to by *gain*. Post filters are set using the [meiFilterPostfilterGet/Set](#) and [meiFilterPostfilterSectionGet/Set](#) methods.

filter	A handle to a Filter object.
gainIndex	The index number of the filter gain table. Unless you are using gain tables, set this value to 0. If you are setting gain tables in Motion Console , this is the drop down box in Filter Summary->Coeffs that says "Gain Table 0", "Gain Table 1", etc.
*gain	Pointer to the gain structure. The gain structure holds the closed loop filter gains. The PID and PIV gains are both set here. The only difference in setting PID vs. PIV gains are the names for the gain indices (see PID example below).

Return Values

[MPIMessageOK](#)

Sample Code

```
/* Sets reasonable tuning parameters for a Trust TA9000 test stand */
void setPIDs(MPIFilter filter)
{
    MPIFilterGain gain;
    long returnValue;

    returnValue = mpiFilterGainGet(filter, 0, &gain);
    msgCHECK(returnValue);

    gain.coeff[MEIFilterGainPIDCoeffGAIN_PROPORTIONAL].f = (float)100;
    gain.coeff[MEIFilterGainPIDCoeffGAIN_INTEGRAL].f = (float)0.2;
    gain.coeff[MEIFilterGainPIDCoeffGAIN_DERIVATIVE].f = (float)1000;
    gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_POSITION].f = (float)0;
    gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_VELOCITY].f = (float)45;
    gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_ACCELERATION].f = (float)101000;
    gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_FRICTION].f = (float)450;
    gain.coeff[MEIFilterGainPIDCoeffINTEGRATIONMAX_MOVING].f = (float)15000;
```

```

gain.coeff[MEIFilterGainPIDCoeffINTEGRATIONMAX_REST].f = (float)15000;
gain.coeff[MEIFilterGainPIDCoeffDRATE].f = (float)0;
gain.coeff[MEIFilterGainPIDCoeffOUTPUT_LIMIT].f = (float)32767;
gain.coeff[MEIFilterGainPIDCoeffOUTPUT_LIMITHIGH].f = (float)32767;
gain.coeff[MEIFilterGainPIDCoeffOUTPUT_LIMITLOW].f = (float)-32767;
gain.coeff[MEIFilterGainPIDCoeffOUTPUT_OFFSET].f = (float)0;
gain.coeff[MEIFilterGainPIDCoeffNOISE_POSITIONFFT].f = (float)0;
gain.coeff[MEIFilterGainPIDCoeffNOISE_FILTERFFT].f = (float)0;
gain.coeff[MEIFilterGainPIDCoeffNOISE_VELOCITYFFT].f = (float)0;

returnValue = mpiFilterGainSet(filter, 0, &gain);
msgCHECK(returnValue);
}

```

Another way to change filter coefficients is to use [mpiFilterConfigGet /Set](#).

```

returnValue = mpiFilterConfigGet(filter, &config, NULL);
msgCHECK(returnValue);

/*
   Look in MEIFilterGainPIDCoeff to get the indexes.
   Not all of the above coefficients are shown in this short example.
*/

config.gain[0].coeff[MEIFilterGainPIDCoeffGAIN_PROPORTIONAL].f = (float)100;
config.gain[0].coeff[MEIFilterGainPIDCoeffGAIN_INTEGRAL].f = (float)0.2;
config.gain[0].coeff[MEIFilterGainPIDCoeffGAIN_DERIVATIVE].f = (float)1000;

returnValue = mpiFilterConfigSet(filter, &config, NULL);
msgCHECK(returnValue);

```

See Also

[mpiFilterGainSet](#) | [mpiFilterConfigGet](#) | [mpiFilterConfigSet](#) | [meiFilterPostfilterGet](#) | [meiFilterPostfilterSet](#) | [meiFilterPostfilterSectionGet](#) | [meiFilterPostfilterSectionSet](#)

mpiFilterGainSet

Declaration

```
long mpiFilterGainSet(MPIFilter    filter,
                    long          gainIndex,
                    MPIFilterGain *gain)
```

Required Header: stdmpi.h

Description

mpiFilterGainSet sets the gain coefficients of a Filter (*filter*, for the gain index specified by *gainIndex*) using data from the structure pointed to by *gain*. Post filters are set using the [meiFilterPostfilterGet/Set](#) and [meiFilterPostfilterSectionGet/Set](#) methods.

filter	A handle to a Filter object.
gainIndex	The index number of the filter gain table. Unless you are using gain tables, set this value to 0. If you are setting gain tables in Motion Console , this is the drop down box in Filter Summary->Coeffs that says "Gain Table 0", "Gain Table 1", etc.
*gain	Pointer to the gain structure. The gain structure holds the closed loop filter gains. The PID and PIV gains are both set here. The only difference in setting PID vs. PIV gains are the names for the gain indices (see PID example below).

Return Values

[MPIMessageOK](#)

Sample Code

```
/* Sets reasonable tuning parameters for a Trust TA9000 test stand */
void setPIDs(MPIFilter filter)
{
    MPIFilterGain gain;
    long returnValue;

    returnValue = mpiFilterGainGet(filter, 0, &gain);
    msgCHECK(returnValue);

    gain.coeff[MEIFilterGainPIDCoeffGAIN_PROPORTIONAL].f = (float)100;
    gain.coeff[MEIFilterGainPIDCoeffGAIN_INTEGRAL].f = (float)0.2;
    gain.coeff[MEIFilterGainPIDCoeffGAIN_DERIVATIVE].f = (float)1000;
    gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_POSITION].f = (float)0;
    gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_VELOCITY].f = (float)45;
    gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_ACCELERATION].f = (float)101000;
    gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_FRICTION].f = (float)450;
    gain.coeff[MEIFilterGainPIDCoeffINTEGRATIONMAX_MOVING].f = (float)15000;
    gain.coeff[MEIFilterGainPIDCoeffINTEGRATIONMAX_REST].f = (float)15000;
    gain.coeff[MEIFilterGainPIDCoeffDRATE].f = (float)0;
```

```

gain.coeff[MEIFilterGainPIDCoeffOUTPUT_LIMIT].f = (float)32767;
gain.coeff[MEIFilterGainPIDCoeffOUTPUT_LIMITHIGH].f = (float)32767;
gain.coeff[MEIFilterGainPIDCoeffOUTPUT_LIMITLOW].f = (float)-32767;
gain.coeff[MEIFilterGainPIDCoeffOUTPUT_OFFSET].f = (float)0;
gain.coeff[MEIFilterGainPIDCoeffNOISE_POSITIONFFT].f = (float)0;
gain.coeff[MEIFilterGainPIDCoeffNOISE_FILTERFFT].f = (float)0;
gain.coeff[MEIFilterGainPIDCoeffNOISE_VELOCITYFFT].f = (float)0;

returnValue = mpiFilterGainSet(filter, 0, &gain);
msgCHECK(returnValue);
}

```

Another way to change filter coefficients is to use [mpiFilterConfigGet /Set](#).

```

returnValue = mpiFilterConfigGet(filter, &config, NULL);
msgCHECK(returnValue);

/*
   Look in MEIFilterGainPIDCoeff to get the indexes.
   Not all of the above coefficients are shown in this short example.
*/

config.gain[0].coeff[MEIFilterGainPIDCoeffGAIN_PROPORTIONAL].f = (float)100;
config.gain[0].coeff[MEIFilterGainPIDCoeffGAIN_INTEGRAL].f = (float)0.2;
config.gain[0].coeff[MEIFilterGainPIDCoeffGAIN_DERIVATIVE].f = (float)1000;

returnValue = mpiFilterConfigSet(filter, &config, NULL);
msgCHECK(returnValue);

```

See Also

[mpiFilterGainGet](#) | [mpiFilterConfigGet](#) | [mpiFilterConfigSet](#) | [meiFilterPostfilterGet](#) | [meiFilterPostfilterSet](#) | [meiFilterPostfilterSectionGet](#) | [meiFilterPostfilterSectionSet](#)

mpiFilterGainIndexGet

Declaration

```
long mpiFilterGainIndexGet(MPIFilter filter,  
                           long *gainIndex)
```

Required Header: stdmpi.h

Description

mpiFilterGainIndexGet gets the current gain index of a Filter (*filter*) and writes it to the location pointed to by *gainIndex*. Reading the gain index tells you what gain table is being used currently.

If the filter is in state `MEIXmpSwitchType MEIXmpSwitchTypeMOTION_ONLY`, the gain index is automatically changed by the firmware as described at [MEIXmpSwitchType](#). When the filter is in state `MEIXmpSwitchType MEIXmpSwitchTypeNONE`, the gain index is controlled by the user.

Gain Scheduling is a feature that switches filter gains for the acceleration, deceleration, constant velocity, and idle states of motion. The post filters are not affected by gain scheduling. Standard algorithms are used with gain scheduling (PID, PIV).

Return Values

[MPIMessageOK](#)

See Also

[MPIFilterConfig](#) | [mpiFilterConfigGet](#) | [mpiFilterConfigSet](#) | [MEIFilterGainIndex](#) | [MEIXmpSwitchType](#) | [mpiFilterGainIndexSet](#) | [mpiFilterGainGet](#) | [mpiFilterGainSet](#)

mpiFilterGainIndexSet

Declaration

```
long mpiFilterGainIndexSet(MPIFilter    filter,
                           long          gainIndex)
```

Required Header: stdmpi.h

Description

mpiFilterGainIndexSet sets the current gain index of a Filter (*filter*) to *gainIndex*. Writing the gain index controls what gain table is currently being used.

If the filter is in state MEIXmpSwitchType **MEIXmpSwitchTypeMOTION_ONLY**, the gain index is changed automatically by the firmware as described at [MEIXmpSwitchType](#). Be aware that the filter can change the gain index in real-time, thereby overwriting your changes in this mode.

When the filter is in state MEIXmpSwitchType **MEIXmpSwitchTypeNONE**, the gain index is controlled by the user. This is the normal state when using FilterGainIndexSet(...). Gain Scheduling is a feature that switches filter gains for the acceleration, deceleration, constant velocity, and idle states of motion. The post filters are not affected by gain scheduling. Standard algorithms are used with gain scheduling (PID, PIV).

Return Values

[MPIMessageOK](#)

See Also

[MPIFilterConfig](#) | [mpiFilterConfigGet](#) | [mpiFilterConfigSet](#) | [MEIFilterGainIndex](#) | [MEIXmpSwitchType](#) | [mpiFilterGainIndexGet](#) | [mpiFilterGainGet](#) | [mpiFilterGainSet](#)

mpiFilterMemory

Declaration

```
long mpiFilterMemory(MPIFilter filter,  
                    void **memory)
```

Required Header: stdmpi.h

Description

mpiFilterMemory writes an address, which is used to access a Filter's (*filter*) memory to the contents of *memory*. This address, or an address calculated from it, can be passed as the *src* parameter to **MPIFilterMemoryGet(...)** and as the *dst* parameter to **MPIFilterMemorySet(...)**.

Return Values

[MPIMessageOK](#)

See Also

[mpiFilterMemoryGet](#) | [mpiFilterMemorySet](#)

mpiFilterMemoryGet

Declaration

```
long mpiFilterMemoryGet(MPIFilter    filter,  
                        void          *dst,  
                        const void    *src,  
                        long          count)
```

Required Header: stdmpi.h

Change History: Modified in the 03.03.00

Description

mpiFilterMemoryGet copies **count** bytes of a Filter's (**filter**) memory (starting at address **src**) and writes them into application memory (starting at address **dst**).

Return Values

[MPIMessageOK](#)

See Also

[mpiFilterMemorySet](#) | [mpiFilterMemory](#)

mpiFilterMemorySet

Declaration

```
long mpiFilterMemorySet(MPIFilter    filter,  
                        void          *dst,  
                        const void    *src,  
                        long          count)
```

Required Header: stdmpi.h

Change History: Modified in the 03.03.00

Description

mpiFilterMemorySet copies **count** bytes of application memory (starting at address **src**) and writes them into a Filter's (**filter**) memory (starting at address **dst**).

Return Values

[MPIMessageOK](#)

See Also

[mpiFilterMemorySet](#) | [mpiFilterMemory](#)

mpiFilterAxisMapGet

Declaration

```
long mpiFilterAxisMapGet(MPIFilter filter,  
                        MPIObjectMap *axisMap)
```

Required Header: stdmpi.h

Description

mpiFilterAxisMapGet gets the object map of the Axes that are associated with a Filter (*filter*), and writes it into the structure pointed to by *axisMap*.

Return Values

[MPIMessageOK](#)

See Also

[mpiFilterAxisMapSet](#)

mpiFilterAxisMapSet

Declaration

```
long mpiFilterAxisMapSet(MPIFilter filter,  
                        MPIObjectMap axisMap)
```

Required Header: stdmpi.h

Description

mpiFilterAxisMapSet sets the Axes associated with a Filter (*filter*), using data from the object map specified by *axisMap*.

Return Values

[MPIMessageOK](#)

See Also

[mpiFilterAxisMapGet](#)

mpiFilterControl

Declaration

```
MPIControl mpiFilterControl(MPIFilter filter)
```

Required Header: stdmpi.h

Description

mpiFilterControl returns a handle to the motion controller (Control object) associated with the specified Filter object (*filter*).

Return Values

handle	to a Control object that a Filter object is associated with
MPIHandleVOID	if the Filter object is invalid

See Also

[mpiFilterConfigGet](#) | [MEIFilterConfig](#)

mpiFilterMotorMapGet

Declaration

```
long mpiFilterMotorMapGet(MPIFilter filter,  
                          MPIObjectMap *motorMap)
```

Required Header: stdmpi.h

Description

mpiFilterMotorMapGet gets the object map of the Motors associated with the Filter (*filter*), and writes it into the structure pointed to by *motorMap*.

Return Values

[MPIMessageOK](#)

See Also

[mpiFilterMotorMapSet](#)

mpiFilterMotorMapSet

Declaration

```
long mpiFilterMotorMapSet(MPIFilter filter,  
                          MPIObjectMap motorMap)
```

Required Header: stdmpi.h

Description

mpiFilterMotorMapSet sets the Motors associated with the Filter (*filter*) using data from the object map specified by *motorMap*.

Return Values

[MPIMessageOK](#)

See Also

[mpiFilterMotorMapGet](#)

mpiFilterNumber

Declaration

```
long mpiFilterNumber(MPIFilter filter,  
                    long *number)
```

Required Header: stdmpi.h

Description

For a motion controller that *filter* is associated with, **mpiFilterNumber** writes the index of *filter* to the contents of *number*.

Return Values

[MPIMessageOK](#)

See Also

mpiFilterIntegratorReset

Declaration

```
long mpiFilterIntegratorReset(MPIFilter filter)
```

Required Header: stdmpi.h

Description

mpiFilterIntegratorReset resets the integrators of filter.

Return Values

[MPIMessageOK](#)

[MPIFilterMessageINVALID_ALGORITHM](#)

Sample Code

```
/* Enable the amplifier for every motor attached to a motion supervisor */
void motionAmpEnable(MPIMotion motion)
{
    MPIControl          control;
    MPIAxis             axis;
    MPIMotor            motor;
    MPIFilter           filter;
    MPIObjectMap       map;
    MPIObjectMap       motionMotorMap;
    long                motorIndex;
    long                filterIndex;
    long                returnValue;
    double              position;
    long                enableState;

    /* Get the controller handle */
    control = mpiMotionControl(motion);

    for (axis = mpiMotionAxisFirst(motion);
         axis != MPIHandleVOID;
         axis = mpiMotionAxisNext(motion, axis)) {

        /* Get the object map for the motors */
        returnValue = mpiAxisMotorMapGet(axis, &map);
        msgCHECK(returnValue);

        /* Add map to motionMotorMap */
        motionMotorMap |= map;
    }

    /* For every motor ... */
    for (motorIndex = 0; motorIndex < MEIXmpMAX_Motors; motorIndex++) {

        if (mpiObjectMapBitGET(motionMotorMap, motorIndex)) {
```

```

/* Create motor handle */
motor = mpiMotorCreate(control, motorIndex);
msgCHECK(mpiMotorValidate(motor));

/* Get the state of the amplifier */
returnValue = mpiMotorAmpEnableGet(motor, &enableState);
msgCHECK(returnValue);

/* If the amplifier is disabled ... */
if (enableState == FALSE) {

    /* For every axis */
    for (axis = mpiMotionAxisFirst(motion);
        axis != MPIHandleVOID;
        axis = mpiMotionAxisNext(motion, axis)) {

        /* Get the object map for the motors */
        returnValue = mpiAxisMotorMapGet(axis, &map);
        msgCHECK(returnValue);

        /* If axis is attached to motor ... */
        if (mpiObjectMapBitGET(map, motorIndex)) {

            /* Get the actual position of the axis */
            returnValue = mpiAxisActualPositionGet
(axis, &position);
            msgCHECK(returnValue);

            /* Set command position equal to actual
position */
            returnValue = mpiAxisCommandPositionSet
(axis, position);
            msgCHECK(returnValue);

        }

    }

    /* Get the object map for the filters */
    returnValue = mpiMotorFilterMapGet(motor, &map);
    msgCHECK(returnValue);

    /* For every filter ... */
    for (filterIndex = 0;
        filterIndex < MEIXmpMAX_Filters;
        filterIndex++) {

        if (mpiObjectMapBitGET(map, filterIndex)) {

            /* Create filter handle */
            filter = mpiFilterCreate(control,
filterIndex);
            msgCHECK(mpiFilterValidate(filter));

            /* Reset integrator */
            returnValue = mpiFilterIntegratorReset
(filter);
            msgCHECK(returnValue);

            /* Delete filter handle */
            returnValue = mpiFilterDelete(filter);
            msgCHECK(returnValue);

        }

    }

}

```

```
    }  
  
    /* Enable the amplifier */  
    returnValue = mpiMotorAmpEnableSet(motor, TRUE);  
    msgCHECK(returnValue);  
}  
  
/* Delete motor handle */  
returnValue = mpiMotorDelete(motor);  
msgCHECK(returnValue);  
}  
}  
}
```

Troubleshooting

If an axis is not in an error state and the filter associated with that axis' motor has a non-zero integration term, then it is very likely that the integrator has built up a substantial integral term. Enabling the motor's amplifier when this has happened could cause the motor to jump with enormous force. Use **mpiFilterIntegratorReset** to reset the integrator before enabling the motor's amplifier to prevent this kind of jump.

Another condition that can cause the motor to jump upon enabling its amplifier is that the command position of the axis is not equal to the actual position of the axis. To prevent this situation, one should use **mpiAxisActualPositionGet** and **mpiAxisCommandPositionSet**. Please refer to these functions for a more in depth discussion.

See Also

[MPIFilter](#) | [MEIFilterConfig](#) | [MEIFilterGainPID](#) | [MEIFilterGainPIV](#)
[mpiAxisActualPositionGet](#) | [mpiAxisCommandPositionSet](#)

meiFilterPosfilterGet

Declaration

```
long meiFilterPostfilterGet(MPIFilter filter,
                           long *sectionCount,
                           MEIPostfilterSection *sections);
```

Required Header: stdmei.h

Description

meiFilterPostfilterGet reads an MPIFilter object's postfilter configuration. It writes to **sectionCount** the number of sections within a postfilter if **sectionCount** is not NULL. It also writes to **sections** the current array of **filter**'s postfilter sections if sections is not NULL.

The MPI calculates the post filter coefficients and takes into consideration the sample rate of the controller at that time. If you change the sample rate of the controller, you will need to recalculate the post filters. This can be done for all filters specified in Hertz by setting the filters again with the MPI. The MPI will calculate the filters using the current servo sample rate.

Postfilters are used to digitally filter the output of a control loop. One common use for postfilters is the compensation of system resonances.

filter	the handle of the MPIFilter object whose postfilter configuration is to be read.
*sectionCount	the data location where the postfilter's current section count will be written.
*sections	the data location where the postfilter's current section configuration data will be written.

Return Values

[MPIMessageOK](#)

[MPIFilterMessageCONVERSION_DIV_BY_0](#)

[MPIFilterMessageINVALID_FILTER_FORM](#)

Sample Code

```
/* Count the number of resonator sections in a MPIFilter object's
postfilter.
Sample usage:

returnValue =
    filterResonatorCount(filter, &resonatorCount);
*/

long filterResonatorCount(MPIFilter filter, long* count)
{
    MPIFilterConfig config;
    MEIPostfilterSection sections[MEIMaxBiQuadSections];
    long sectionCount, index;
```

```
    long returnValue = (count==NULL) ? MPIMessageARG_INVALID :
MPIMessageOK;

    if (returnValue == MPIMessageOK)
    {
        returnValue =
            meiFilterPostfilterGet(filter, &sectionCount, sections);

        if (returnValue == MPIMessageOK)
        {
            for (*count=0, index=0; index < sectionCount; ++index)
            {
                if (section[index].type == MEIFilterTypeRESONATOR) ++(*count);
            }
        }
        return returnValue;
    }
}
```

See Also

[MEIPostfilterSection](#) | [meiFilterPostfilterGet](#) | [meiFilterPostfilterSet](#) | [meFilterPostfilterSectionGet](#) | [MEIMaxBiQuadSections](#) | [Post Filter Theory](#)

meiFilterPostfilterSet

Declaration

```
long meiFilterPostfilterSet(MPIFilter filter,
                           long *sectionsCount,
                           MEIPostfilterSection *sections);
```

Required Header: stdmei.h

Description

meiFilterPostfilterSet sets the number of postfilter sections within an MPIFilter object and configures each postfilter section as well. If **numberOfSections** equals zero, then **sections** can be NULL and the postfilter will be disabled.

The MPI calculates the post filter coefficients and takes into consideration the sample rate of the controller at that time. If you change the sample rate of the controller, you will need to recalculate the post filters. This can be done for all filters specified in Hertz by setting the filters again with the MPI. The MPI will calculate the filters using the current servo sample rate.

Postfilters are used to digitally filter the output of a control loop. One common use for postfilters is the compensation of system resonances.

filter	the handle of the MPIFilter object whose postfilter sections will be configured.
*sectionsCount	the number of postfilter sections to set in the filter object.
*sections	a pointer to an array of MEIPostfilterSection data structures to be set in filter .

Return Values

[MPIMessageOK](#)

Sample Code

```
/* Set a 4th order low-pass post-filter by using
   two 2nd order low-pass sections.
   Sample usage:

   returnValue =
       fourthOrderLowPass(filter, 300 /* Hz */);
*/
long filterFouthOrderLowpass(MPIFilter filter, long breakPointFrequency)
{
    MPIFilterConfig config;
    MEIPostfilterSection section[MEIMaxBiQuadSections];
    long returnValue;
```



```
section[0].type = MEIFilterTypeLOW_PASS;
section[0].form = MEIFilterFormINT_BIQUAD;
section[0].data.lowPass.breakpoint = breakpointFrequency;
section[1] = section[0]; /* copy first section */

returnValue =
    meiFilterPostfilterSet(filter, 2, section);

return returnValue;
}
```

See Also

[MEIPostfilterSection](#) | [meiFilterPostfilterGet](#) | [meFilterPostfilterSectionSet](#) | [MEIMaxBiQuadSections](#) | [Post Filter Theory](#)

meiFilterPostfilterSectionGet

Declaration

```
long meiFilterPostfilterSectionGet(MPIFilter          filter,
                                   long                 sectionNumber,
                                   MEIPostfilterSection *section);
```

Required Header: stdmei.h

Description

meiFilterPostfilterSectionGet reads the configuration of a single section of an MPIFilter object's postfilter. It writes to ***section** the configuration of **filter**'s postfilter **sectionNumber**th section.

The MPI calculates the post filter coefficients and takes into consideration the sample rate of the controller at that time. If you change the sample rate of the controller, you will need to recalculate the post filters. This can be done for all filters specified in Hertz by setting the filters again with the MPI. The MPI will calculate the filters using the current servo sample rate.

Postfilters are used to digitally filter the output of a control loop. One common use for postfilters is the compensation of system resonances.

filter	the handle of the MPIFilter object whose postfilter section configuration is to be read.
sectionNumber	the index of the postfilter section whose configuration is to be read.
section	the data location where the postfilter's current section configuration data will be written.

Return Values

[MPIMessageOK](#)

[MPIFilterMessageCONVERSION_DIV_BY_0](#)

[MPIFilterMessageSECTION_NOT_ENABLED](#)

[MPIFilterMessageINVALID_FILTER_FORM](#)

Sample Code

```
/* Test a section of a MPIFilter object's postfilter to
   see if it is a notch type.
   Sample usage:

   returnValue =
       isSectionTypeNotch(filter, 0, &isNotch);
*/
long isSectionTypeNotch(MPIFilter filter, long sectionIndex, long* isNotch)
{
    MPIFilterConfig config;
    MEIPostfilterSection section;
    long returnValue = (isNotch==NULL) ? MPIMessageARG_INVALID :
MPIMessageOK;

    if (returnValue == MPIMessageOK)
    {
        returnValue =
            meiFilterPostfilterSectionGet(filter, sectionIndex, &section);
        if (returnValue == MPIMessageOK)
        {
            *isNotch = (section.type == MEIFilterTypeNOTCH) ? TRUE : FALSE;
        }
    }

    return returnValue;
}
```

See Also

[MEIPostfilterSection](#) | [meiFilterPostfilterGet](#) | [meFilterPostfilterSectionSet](#) | [MEIMaxBiQuadSections](#) | [Post Filter Theory](#)

meiFilterPostfilterSectionSet

Declaration

```
long meiFilterPostfilterSectionSet(MPIFilter filter,
                                   long sectionNumber,
                                   MEIPostfilterSection *section);
```

Required Header: stdmei.h

Description

meiFilterPostfilterSectionSet sets the configuration of a single section of an MPIFilter object's postfilter. It sets *filter*'s postfilter *sectionNumber*th section to the configuration specified in **section*. If the postfilter type is IIR, then this method is essentially equivalent to meiFilterPostfilterSet().

The MPI calculates the post filter coefficients taking into consideration the sample rate of the controller at that time. If you change the change the sample rate of the controller, you will need to recalculate your post filters. This can be done for all filters specified in Hertz by setting the filters again using the MPI. The MPI will calculate the filters using the current servo sample rate.

Postfilters are used to digitally filter the output of a control loop. One common use for postfilters is the compensation of system resonances.

filter	the handle of the MPIFilter object whose postfilter section configuration is to be set.
sectionNumber	the index of the postfilter section whose configuration is to be set.
*section	the data location of the section configuration to copy to the controller.

Return Values

[MPIMessageOK](#)

Sample Code

```
/* Set a section of a MPIFilter object's postfilter
   to a unity gain filter type.
   Sample usage:

   returnValue =
       setSectionTypeUnityGain(filter, 3);
*/
long setSectionTypeUnityGain(MPIFilter filter, long sectionIndex)
{
    MPIFilterConfig config;
    MEIPostfilterSection section;
    long returnValue;

    section.type = MEIFilterTypeUNITY_GAIN;
    section.form = MEIFilterFormBIQUAD;

    returnValue =
        meiFilterPostfilterSectionSet(filter, sectionIndex,
    §ion);

    return returnValue;
}
```

See Also

[MEIPostfilterSection](#) | [meiFilterPostfilterSet](#) | [meFilterPostfilterSectionGet](#) | [MEIMaxBiQuadSections](#) | [Post Filter Theory](#)

MPIFilterCoeff

Definition

```
typedef union {  
    float    f;  
    long     l;  
} MPIFilterCoeff;
```

Description

MPIEventStatus holds information about a particular event that was generated by the XMP.

f	float coefficient
l	long coefficient

See Also

[MPIFilterCoeffCOUNT_MAX](#) | [MEIFilterGainPIDCoeff](#) | [MEIFilterGainPIVCoeff](#)

MPIFilterConfig / MEIFilterConfig

Definition: MPIFilterConfig

```
typedef struct MPIFilterConfig {
    long            gainIndex;
    MPIFilterGain  gain[MPIFilterGainCOUNT_MAX];

    MPIObjectMap   axisMap;
    MPIObjectMap   motorMap;
} MPIFilterConfig;
```

Description

gainIndex	Gain table index. Gain tables number 0 to MPIFilterGainCOUNT_MAX -1 (MPIFilterGainCOUNT_MAX = 5).
gain	See MPIObjectMap
axisMap	See MPIObjectMap
motorMap	See MPIObjectMap

Definition: MEIFilterConfig

```
typedef struct MEIFilterConfig {
    char            userLabel[MEIObjectLabelCharMAX+1];
                    /* +1 for NULL terminator */
    MEIXmpAlgorithm  Algorithm;

    MEIXmpAxisInput Axis[MEIXmpFilterAxisInputs];

    long            *VelPtr;

    MEIXmpSwitchType GainSwitchType;
    float           GainDelay;
    long            GainWindow;
    MEIXmpSwitchType PPISwitchType;
    MEIXmpPPIMode   PPIMode;
    float           PPIDelay;
    long            PPIWindow;
    MEIXmpIntResetConfig ResetIntegratorConfig;
    float           ResetIntegratorDelay;

    MEIXmpFilterForm PostFilterForm;
    MEIXmpPostFilter PostFilter;
} MEIFilterConfig;
```

Change History: Modified in the 03.04.00. Modified in the 03.03.00.

Description

MEIFilterConfig contains configuration information specific to a controller. With the exception of the Algorithm element, MEIFilterConfig contains configuration information that are more intuitively accessed by other means (Postfilter parameter) or information for advanced setups and custom controller firmware.

userLabel	This value consists of 16 characters and is used to label the filter object for user identification purposes. The userLabel field is NOT used by the controller.
Algorithm	This value defines the algorithm that the filter is executing every servo cycle. The most common values are: MEIXmpAlgorithmPID PID algorithm MEIXmpAlgorithmPIV PIV algorithm MEIXmpAlgorithmNONE No control algorithm
Axis [MEIXmpFilterAxisInputs]	This array defines the axis (pointer to the axis) and coefficient for the position input into the filter. The input to the filter is the position error of the axis, which is multiplied by the coefficient defined by the Axis array.
*VelPtr	Pointer to an velocity value for algorithms that require a velocity input (such as the PIV algorithm).
AuxInput [MEIXmpFilterAuxInputs]	This array is a place holder for additional filter inputs from analog sources. This is currently not supported and is reserved for future use.
GainSwitchType	Value to define the gain table switch type. Not implemented in standard firmware.
GainDelay	Custom Delay Not implemented in standard firmware.
GainWindow	Custom Delay Not implemented in standard firmware.
PPISwitchType	Value to define the gain switch type for PPI mode. Not implemented in standard firmware.
PPIMode	Value to define the PPI switch mode. Not implemented in standard firmware.
PPIDelay	Custom Delay Not implemented in standard firmware.
PPIWindow	Custom Window Not implemented in standard firmware.
ResetIntegratorConfig	Value to define the integrator's reset configuration. Not supported in standard firmware.
ResetIntegratorDelay	Value to define the integrator's reset delay. Not supported in standard firmware.

PostFilterForm	<p>This value defines the form for postfilters when they are configured using <code>mpiFilterConfigGet/Set()</code>.</p> <p>Supported values are:</p> <ul style="list-style-type: none"> • MEIXmpFilterFormIIR, IIR Filter • MEIXmpFilterFormBIQ, Bi-Quad Filter • MEIXmpFilterFormSS_BIQ, State Space form of Bi-Quad Filter • MEIXmpFilterFormINT_BIQ, Integer (64-bit) Bi-Quad Filter • MEIXmpFilterFormINT_SS_BIQ, Integer State Space form of Bi-Quad Filter <p>Though the postfilter may be configured through this parameter, it is strongly recommended that users use the <code>meiFilterPostfilter.()</code> methods instead for a more intuitive and user-friendly interface.</p>
PostFilter	<p>This array defines the configuration for the filter's postfilter (the type, the length and values for the post filter coefficients). Though the postfilter may be configured through this parameter, it is strongly recommended that users use the <code>meiFilterPostfilter.()</code> methods instead for a more intuitive interface.</p> <p>Postfilters are used to digitally filter the output of a control loop. One common use for postfilters is the compensation of system resonances.</p>

Sample Code

```

/*  Test whether an MPIFilter object's control loop algorithm is PID.
    Sample usage:

    returnValue =
        isAlgorithmPid(filter, &isPid);
*/

long isAlgorithmPid(MPIFilter filter, long* isPid)
{
    MEIFilterConfig xmpConfig;
    long returnValue = (isPid==NULL) ? MPIMessageARG_INVALID : MPIMessageOK;

    if (returnValue == MPIMessageOK)
    {
        returnValue =
            mpiFilterConfigGet(filter, NULL, &xmpConfig);
        if (returnValue == MPIMessageOK)
        {
            *isPid = (xmpConfig.Algorithm == MEIXmpAlgorithmPID) ? TRUE :

```

```
FALSE;  
    }  
}  
  
    return returnValue;  
}
```

See Also

[mpiFilterConfigGet](#) | [mpiFilterConfigSet](#) | [meiFilterPostfilterGet](#) |
[meiFilterPostfilterSet](#) | [meiFilterPostfilterSectionGet](#) | [meiFilterPostfilterSectionSet](#)

MEIFilterForm

Definition

```
typedef enum{
    MEIFilterFormIIR,
    MEIFilterFormBIQUAD,
    MEIFilterFormSS_BIQUAD,
    MEIFilterFormINT_BIQUAD,
    MEIFilterFormINT_SS_BIQUAD,
} MEIFilterForm;
```

Description

MEIFilterForm describes the form that a digital filter takes on the controller. Please note that the equations listed below use the coefficients loaded onto the controller, not necessarily the coefficients used by the MPI. A user may specify a low pass filter with only a single parameter (the breakpoint) and request that the form of the filter be a space-state biquad form on the controller.

Digital filtering on the XMP is accomplished through 32-bit words. This equates to the use of single precision floating point numbers - a 24-bit mantissa or about 7 decimal places of accuracy. This lack of precision can cause errors in the filtering process normally appearing as DC gain shifts or limit cycling, this especially true when the filter requires more than one section, a 6th order low pass filter would be one example. Filter forms using integer math can provide more internal precision for coefficients and internal registers but at the cost of less dynamic range. Filter forms using integer math take more processing time for the controller and can potentially limit the maximum sample rate of the controller.

The state-space (SS) filter forms allow the scaling of the input and the output, whereas the non-state-space forms only allow output scaling. This helps to prevent the loss of precision of the internal registers while still maintaining a very large dynamic range. Filter forms using state-space forms take more processing time for the controller and can potentially limit the maximum sample rate of the controller. However, a non-integer state-space filter form takes less processing power than an integer non-state-space filter form.

MEIFilterFormIIR	Deprecated. Cascaded biquad sections offer better precision and better calculation performance.
MEIFilterFormBIQUAD	<p>Second Order digital filter form, for implementing low/high pass, notch, lead/lag and custom filters. The filter is a single precision floating point canonical form. The biquad filter is defined by the following discrete transfer function:</p> <p>The XMP's representation of this filter is:</p> <p>w0: Intermediate result u(k): filter input a1, a2, b0, b1, and b2: discrete biquad coefficients y(k):filter output x1k and x2k: filter states</p>
MEIFilterFormSS_BIQUAD	<p>Second order digital filter form, for implementing low/high pass, notch, lead/lag and custom filters. The filter is a single precision, floating point state space implementation. This filter applies input and output scaling to the canonical form. The XMP's state space representation of this filter is:</p> <p>u(k): filter input d1, c1, c2, a2, a1,b1: discrete biquad coefficients y(k):filter output p1k and p2k: filter states</p>
MEIFilterFormINT_BIQUAD	<p>Second Order digital filter form, for implementing low/high pass, notch, lead/lag and custom filters. The filter is a fixed point canonical form state space implementation. This form is a fixed point implementation of the floating point form MEIFilterFormBIQUAD. See the definition of MEIFilterFormBIQUAD above for the defining equations for this filter.</p> <p>The input coefficients for this filter (b0, b1, b2, a1 and a2) should all be greater than -2, and less than 2. The coefficients are represented as 32 bit 2's complement, with $1=2^{30}$. The coefficient's numerical format is 1.29 (1 bit whole, 29 bits fractional), and the controller uses an 80 bit accumulator. Only the 32 bit result of the multiplication is output from each section.</p>

MEIFilterFormINT_SS_BIQUAD

Second Order digital filter form, for implementing low/high pass, notch, lead/lag and custom filters. The filter is a fixed point canonical form state space implementation. This form is a fixed point implementation of the floating point form MEIFilterFormSS_BIQUAD. See the definition of MEIFilterFormSS_BIQUAD above for the defining equations for this filter.

The input coefficients for this filter (d1, c1, c2, a2, a1 and b1) should all be greater than -2, and less than 2. The coefficients are represented as 32 bit 2's complement, with $1=2^{30}$. The coefficient's numerical format is 1.29 (1 bit whole, 29 bits fractional), and the controller uses an 80 bit accumulator. Only the 32 bit result of the multiplication is output from each section.

See Also

[MEIPostfilterSection](#)

MPIFilterGain

Definition

```
typedef struct MPIFilterGain {
    MPIFilterCoeff  coeff[MPIFilterCoeffCOUNT_MAX];
} MPIFilterGain;
```

Description

coeff	see MPIFilterCoeff
--------------	------------------------------------

Sample Code

```
/* Sets reasonable tuning parameters for a Trust TA9000 test stand */
void setPIDs(MPIFilter filter)
{
    MPIFilterGain gain;
    long returnValue;

    returnValue = mpiFilterGainGet(filter, 0, &gain);
    msgCHECK(returnValue);

    gain.coeff[MEIFilterGainPIDCoeffGAIN_PROPORTIONAL].f = (float)100;
    gain.coeff[MEIFilterGainPIDCoeffGAIN_INTEGRAL].f = (float)0.2;
    gain.coeff[MEIFilterGainPIDCoeffGAIN_DERIVATIVE].f = (float)1000;
    gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_POSITION].f = (float)0;
    gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_VELOCITY].f = (float)45;
    gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_ACCELERATION].f = (float)101000;
    gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_FRICTION].f = (float)450;
    gain.coeff[MEIFilterGainPIDCoeffINTEGRATIONMAX_MOVING].f = (float)15000;
    gain.coeff[MEIFilterGainPIDCoeffINTEGRATIONMAX_REST].f = (float)15000;
    gain.coeff[MEIFilterGainPIDCoeffDRATE].f = (float)0;
    gain.coeff[MEIFilterGainPIDCoeffOUTPUT_LIMIT].f = (float)32767;
    gain.coeff[MEIFilterGainPIDCoeffOUTPUT_LIMITHIGH].f = (float)32767;
    gain.coeff[MEIFilterGainPIDCoeffOUTPUT_LIMITLOW].f = (float)-32767;
    gain.coeff[MEIFilterGainPIDCoeffOUTPUT_OFFSET].f = (float)0;
    gain.coeff[MEIFilterGainPIDCoeffNOISE_POSITIONFFT].f = (float)0;
    gain.coeff[MEIFilterGainPIDCoeffNOISE_FILTERFFT].f = (float)0;
    gain.coeff[MEIFilterGainPIDCoeffNOISE_VELOCITYFFT].f = (float)0;

    returnValue = mpiFilterGainSet(filter, 0, &gain);
    msgCHECK(returnValue);
}
```

See Also

[MPIFilterGainCOUNT_MAX](#) | [MEIFilterGainPIDCoeff](#) | [MEIFilterGainPIVCoeff](#)

MEIFilterGainIndex

Definition

```
typedef enum {

    /* Gain table index for normal firmware. */
    MEIFilterGainIndexNO_MOTION = MEIXmpGainNOT_MOVING,
    MEIFilterGainIndexACCEL      = MEIXmpGainACCEL,
    MEIFilterGainIndexDECEL      = MEIXmpGainDECEL,
    MEIFilterGainIndexVELOCITY   = MEIXmpGainCONSTANT_VEL,

    /* Gain table index for Custom 1 firmware. */
    MEIFilterGainIndexSTOPPING2  = MEIXmpGainSTOPPED2,
    MEIFilterGainIndexSTOPPING1  = MEIXmpGainSTOPPED1,
    MEIFilterGainIndexSETTLING    = MEIXmpGainSETTLING,
    MEIFilterGainIndexMOVING      = MEIXmpGainMOVING,
    MEIFilterGainIndexSTOPPING3  = MEIXmpGainSTOPPED3,

    /* Gain table index for Custom 5 firmware. */
    MEIFilterGainIndexMIN         = MEIXmpGainMIN,
    MEIFilterGainIndexMAX         = MEIXmpGainMAX,
    MEIFilterGainIndexNONE        = MEIXmpGainNONE,
    MEIFilterGainIndexSLOPE       = MEIXmpGainSLOPE,

    MEIFilterGainIndexLAST        = MEIXmpGainLAST,
    MEIFilterGainIndexALL         = MEIFilterGainIndexLAST,
                                   /* used for gain get/set() */
    MEIFilterGainIndexFIRST       = MEIFilterGainIndexINVALID + 1,

    MEIFilterGainIndexDEFAULT     = MEIFilterGainIndexNO_MOTION,
} MEIFilterGainIndex;
```

Description

MEIFilterGainIndex is an enumeration for the gain index used in gain scheduling.

In standard firmware, only

MEIFilterGainIndexNO_MOTION,
MEIFilterGainIndexACCEL,
MEIFilterGainIndexDECEL, and
MEIFilterGainIndexVELOCITY

are used. The gain index that is currently used can be found with [mpiFilterGainIndexGet\(...\)](#).

Gain Scheduling is a feature that switches filter gains for the acceleration, deceleration, constant velocity, and idle states of motion. The post filters are not affected by gain scheduling. Standard algorithms are used with gain scheduling (PID, PIV). To change the gain scheduling type from NONE (uses only the gains in gain table index 0), use [MEIFilterConfig](#). GainSwitchType is set with [mpiFilterConfigSet\(...\)](#).

When setting filter gain parameters using [mpiFilterGainGet\(...\)](#) and [mpiFilterGainSet\(...\)](#), use the gain index value to write to a gain index of your choosing.

MEIFilterGainIndexNO_MOTION	No commanded motion. Trajectory parameters Velocity, Acceleration, and Jerk equal zero.
MEIFilterGainIndexACCEL	Acceleration portion of the commanded move.
MEIFilterGainIndexDECEL	Deceleration portion of the commanded move.
MEIFilterGainIndexVELOCITY	Constant velocity portion of the commanded move. Gain switching is configured by setting the GainSwitchType, GainDelay, and GainWindow in the MEIFilterConfig{...} structure and calling mpiFilterConfigGet/Set(...). The GainSwitchType has the following options:

See Also

[MEIFilterConfig](#) | [mpiFilterConfigGet](#) | [mpiFilterConfigSet](#) | [MEIXmpSwitchType](#) | [mpiFilterGainIndexSet](#) | [mpiFilterGainIndexGet](#) | [mpiFilterGainGet](#) | [mpiFilterGainSet](#)

MEIFilterGainPID

Definition

```
typedef struct MEIFilterGainPID {
    struct {
        float    proportional;    /* Kp */
        float    integral;        /* Ki */
        float    derivative;      /* Kd */
    } gain;
    struct {
        float    position;        /* Kpff */
        float    velocity;        /* Kvff */
        float    acceleration;    /* Kaff */
        float    friction;        /* Kfff */
    } feedForward;
    struct {
        float    moving;         /* MovingIMax */
        float    rest;           /* RestIMax */
    } integrationMax;
    long    dRate;               /* DRate */
    struct {
        float    limit;          /* OutputLimit */
        float    limitHigh;      /* OutputLimitHigh */
        float    limitLow;       /* OutputLimitLow */
        float    offset;         /* OutputOffset */
    } output;
    struct {
        float    positionFFT;    /* Ka0 */
        float    filterFFT;      /* Ka1 */
        float    velocityFFT;    /* Ka2 */
    } noise;
} MEIFilterGainPID;
```

Description

MEIFilterGainPID is a structure that defines the filter coefficients for the PID filter algorithm.

See Also

[High/Low Output Limits](#) section for special instructions regarding MEIFilterGainPID.
[MEIFilterGainPIDCoeff](#)

MEIFilterGainPIDCoeff

Definition

```
typedef          enum {
    MEIFilterGainPIDCoeffGAIN_PROPORTIONAL, /* Kp */
    MEIFilterGainPIDCoeffGAIN_INTEGRAL,     /* Ki */
    MEIFilterGainPIDCoeffGAIN_DERIVATIVE,   /* Kd */

    MEIFilterGainPIDCoeffFEEDFORWARD_POSITION, /* Kpff */
    MEIFilterGainPIDCoeffFEEDFORWARD_VELOCITY, /* Kvff */
    MEIFilterGainPIDCoeffFEEDFORWARD_ACCELERATION, /* Kaff */
    MEIFilterGainPIDCoeffFEEDFORWARD_FRICTION, /* Kfff */

    MEIFilterGainPIDCoeffINTEGRATIONMAX_MOVING, /* MovingIMax */
    MEIFilterGainPIDCoeffINTEGRATIONMAX_REST, /* RestIMax */

    MEIFilterGainPIDCoeffDRATE, /* DRate */

    MEIFilterGainPIDCoeffOUTPUT_LIMIT, /* OutputLimit */
    MEIFilterGainPIDCoeffOUTPUT_LIMITHIGH, /* OutputLimitHigh */
    MEIFilterGainPIDCoeffOUTPUT_LIMITLOW, /* OutputLimitLow */
    MEIFilterGainPIDCoeffOUTPUT_OFFSET, /* OutputOffset */

    MEIFilterGainPIDCoeffNOISE_POSITIONFFT, /* Ka0 */
    MEIFilterGainPIDCoeffNOISE_FILTERFFT, /* Ka1 */
    MEIFilterGainPIDCoeffNOISE_VELOCITYFFT, /* Ka2 */
} MEIFilterGainPIDCoeff;
```

Description

MEIFilterGainPIDCoeff is a structure of enums that defines the filter coefficients for the PID filter algorithm.

Sample Code

```
/* Sets reasonable tuning parameters for a Trust TA9000 test stand */
void setPIDs(MPIFilter filter)
{
    MPIFilterGain gain;
    long returnValue;

    returnValue = mpiFilterGainGet(filter, 0, &gain);
    msgCHECK(returnValue);

    gain.coeff[MEIFilterGainPIDCoeffGAIN_PROPORTIONAL].f = (float)100;
    gain.coeff[MEIFilterGainPIDCoeffGAIN_INTEGRAL].f = (float)0.2;
    gain.coeff[MEIFilterGainPIDCoeffGAIN_DERIVATIVE].f = (float)1000;
    gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_POSITION].f = (float)0;
    gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_VELOCITY].f = (float)45;
```

```
gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_ACCELERATION].f = (float)101000;
gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_FRICTION].f = (float)450;
gain.coeff[MEIFilterGainPIDCoeffINTEGRATIONMAX_MOVING].f = (float)15000;
gain.coeff[MEIFilterGainPIDCoeffINTEGRATIONMAX_REST].f = (float)15000;
gain.coeff[MEIFilterGainPIDCoeffDRATE].f = (float)0;
gain.coeff[MEIFilterGainPIDCoeffOUTPUT_LIMIT].f = (float)32767;
gain.coeff[MEIFilterGainPIDCoeffOUTPUT_LIMITHIGH].f = (float)32767;
gain.coeff[MEIFilterGainPIDCoeffOUTPUT_LIMITLOW].f = (float)-32767;
gain.coeff[MEIFilterGainPIDCoeffOUTPUT_OFFSET].f = (float)0;
gain.coeff[MEIFilterGainPIDCoeffNOISE_POSITIONFFT].f = (float)0;
gain.coeff[MEIFilterGainPIDCoeffNOISE_FILTERFFT].f = (float)0;
gain.coeff[MEIFilterGainPIDCoeffNOISE_VELOCITYFFT].f = (float)0;

returnValue = mpiFilterGainSet(filter, 0, &gain);
msgCHECK(returnValue);
}
```

See Also

[MEIFilterGainPID](#)

MEIFilterGainPIV

Definition

```

typedef      struct MEIFilterGainPIV {
    struct {
        float    proportional;    /* Kpp */
        float    integral;        /* Kip */
    } gainPosition;
    struct {
        float    proportional;    /* Kpv */
    } gainVelocity1;
    struct {
        float    position;        /* Kpff */
        float    velocity;        /* Kvff */
        float    acceleration;    /* Kaff */
        float    friction;        /* Kfff */
    } feedForward;
    struct {
        float    moving;          /* MovingIMax */
        float    rest;            /* RestIMax */
    } integrationMax;
    struct {
        float    feedback;        /* Kdv */
    } gainVelocity2;
    struct {
        float    limit;           /* OutputLimit */
        float    limitHigh;       /* OutputLimitHigh */
        float    limitLow;        /* OutputLimitLow */
        float    offset;          /* OutputOffset */
    } output;
    struct {
        float    integral;        /* Kiv */
        float    integrationMax;   /* VintMax */
    } gainVelocity3;
    struct {
        float    positionFFT;     /* Ka0 */
        float    smoothing;       /* Ka1 */
        float    filterFFT;       /* Ka2 */
    } noise;
} MEIFilterGainPIV;

```

Change History: Modified in the 03.02.00

Description

MEIFilterGainPIV is a structure that defines the filter coefficients for the PIV filter algorithm.

See Also

[High/Low Output Limits](#) section for special instructions regarding MEIFilterGainPIV.
[MEIFilterGainPIVCoeff](#)

MEIFilterGainPIVCoeff

Definition

```

typedef          enum {
    MEIFilterGainPIVCoeffGAINPOSITION_PROPORTIONAL,      /* Kpp */
    MEIFilterGainPIVCoeffGAINPOSITION_INTEGRAL,          /* Kip */

    MEIFilterGainPIVCoeffGAINVELOCITY_PROPORTIONAL,      /* Kpv */

    MEIFilterGainPIVCoeffFEEDFORWARD_POSITION,           /* Kpff */
    MEIFilterGainPIVCoeffFEEDFORWARD_VELOCITY,           /* Kvff */
    MEIFilterGainPIVCoeffFEEDFORWARD_ACCELERATION,       /* Kaff */
    MEIFilterGainPIVCoeffFEEDFORWARD_FRICTION,           /* Kfff */

    MEIFilterGainPIVCoeffINTEGRATIONMAX_MOVING,          /* MovingIMax */
    MEIFilterGainPIVCoeffINTEGRATIONMAX_REST,            /* RestIMax */

    MEIFilterGainPIVCoeffGAINVELOCITY_FEEDBACK,          /* Kdv */

    MEIFilterGainPIVCoeffOUTPUT_LIMIT,                   /* OutputLimit */
    MEIFilterGainPIVCoeffOUTPUT_LIMITHIGH,               /* OutputLimitHigh */
    MEIFilterGainPIVCoeffOUTPUT_LIMITLOW,                /* OutputLimitLow */
    MEIFilterGainPIVCoeffOUTPUT_OFFSET,                  /* OutputOffset */

    MEIFilterGainPIVCoeffGAINVELOCITY_INTEGRAL,          /* Kiv */
    MEIFilterGainPIVCoeffGAINVELOCITY_INTEGRATIONMAX,    /* Vintmax */

    MEIFilterGainPIVCoeffNOISE_POSITIONFFT,              /* Ka0 */
    MEIFilterGainPIVCoeffSMOOTHINGFILTER_GAIN,           /* Ka1 */
    MEIFilterGainPIVCoeffNOISE_FILTERFFT,               /* Ka2 */
} MEIFilterGainPIVCoeff;

```

Change History: Modified in the 03.02.00

Description

MEIFilterGainPIVCoeff is a structure of enums that defines the filter coefficients for the PIV filter algorithm.

Sample Code


```
/* Sets reasonable tuning parameters for a Trust TA9000 test stand */
void setPIDs(MPIFilter filter)
{
    MPIFilterGain gain;
    long returnValue;

    returnValue = mpiFilterGainGet(filter, 0, &gain);
    msgCHECK(returnValue);

    gain.coeff[MEIFilterGainPIDCoeffGAIN_PROPORTIONAL].f = (float)100;
    gain.coeff[MEIFilterGainPIDCoeffGAIN_INTEGRAL].f = (float)0.2;
    gain.coeff[MEIFilterGainPIDCoeffGAIN_DERIVATIVE].f = (float)1000;
    gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_POSITION].f = (float)0;
    gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_VELOCITY].f = (float)45;
    gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_ACCELERATION].f = (float)101000;
    gain.coeff[MEIFilterGainPIDCoeffFEEDFORWARD_FRICTION].f = (float)450;
    gain.coeff[MEIFilterGainPIDCoeffINTEGRATIONMAX_MOVING].f = (float)15000;
    gain.coeff[MEIFilterGainPIDCoeffINTEGRATIONMAX_REST].f = (float)15000;
    gain.coeff[MEIFilterGainPIDCoeffDRATE].f = (float)0;
    gain.coeff[MEIFilterGainPIDCoeffOUTPUT_LIMIT].f = (float)32767;
    gain.coeff[MEIFilterGainPIDCoeffOUTPUT_LIMITHIGH].f = (float)32767;
    gain.coeff[MEIFilterGainPIDCoeffOUTPUT_LIMITLOW].f = (float)-32767;
    gain.coeff[MEIFilterGainPIDCoeffOUTPUT_OFFSET].f = (float)0;
    gain.coeff[MEIFilterGainPIDCoeffNOISE_POSITIONFFT].f = (float)0;
    gain.coeff[MEIFilterGainPIDCoeffNOISE_FILTERFFT].f = (float)0;
    gain.coeff[MEIFilterGainPIDCoeffNOISE_VELOCITYFFT].f = (float)0;

    returnValue = mpiFilterGainSet(filter, 0, &gain);
    msgCHECK(returnValue);
}
```

See Also

[High/Low Output Limits](#) section for special instructions regarding MEIFilterGainPIV.
[MEIFilterGainPIV](#)

MEIFilterGainTypePID

Definition

```
static MEIDataType MEIFilterGainTypePID[MPIFilterCoeffCOUNT_MAX] =
{
    MEIDataTypeFLOAT, /* Kp          */
    MEIDataTypeFLOAT, /* Ki          */
    MEIDataTypeFLOAT, /* Kd          */

    MEIDataTypeFLOAT, /* Kpff        */
    MEIDataTypeFLOAT, /* Kvff        */
    MEIDataTypeFLOAT, /* Kaff        */
    MEIDataTypeFLOAT, /* Kfff        */

    MEIDataTypeFLOAT, /* MovingIMax  */
    MEIDataTypeFLOAT, /* RestIMax    */

    MEIDataTypeLONG,  /* DRate       */

    MEIDataTypeFLOAT, /* OutputLimit */
    MEIDataTypeFLOAT, /* OutputLimitHigh */
    MEIDataTypeFLOAT, /* OutputLimitLow */
    MEIDataTypeFLOAT, /* OutputOffset */
    MEIDataTypeFLOAT, /* Ka0         */
    MEIDataTypeFLOAT, /* Ka1         */
    MEIDataTypeFLOAT, /* Ka2         */
};
```

Description

MEIFilterGainTypePID is a static array that describes the data type of the coefficients for the PID algorithm. Specifically, an element of **MEIFilterGainTypePID** describes which member of the union **MPIFilterCoeff** to access when using the data structure **MPIFilterCoeff**.

MEIFilterGainTypePID allows for a more simple design of general case utilities and configuration routines. If it is known that only the PID parameters will be used, then the data structure **MEIFilterGainPID** can be used directly without having to manipulate **MPIFilterCoeff**, **MPIFilterCoeff**, and **MEIFilterGainTypePID**.

Sample Code

```

/* Read the current value of a filter's PID coefficient. Sample usage:

returnValue =
    getPidFilterCoeff(filter, MEIFilterGainPIDCoeffGAIN_PROPORTIONAL, &kp);
*/
long getPidFilterCoeff(MPIFilter filter, long index, double* value)
{
    MPIFilterConfig config;
    long returnValue = (value==NULL) ? MPIMessageARG_INVALID : MPIMessageOK;

    if (returnValue == MPIMessageOK)
    {
        returnValue = mpiFilterConfigGet(filter, &config, NULL);

        if (returnValue == MPIMessageOK)
        {
            switch(MEIFilterGainTypePID[index])
            {
                case MEIDataTypeLONG:
                    *value = config.gain[config.gainIndex].coeff[index].l;
                    break;
                case MEIDataTypeFLOAT:
                    *value = config.gain[config.gainIndex].coeff[index].f;
                    break;
                default:
                    returnValue = MPIMessageARG_INVALID;
            }
        }
    }
    return returnValue;
}

```

See Also

[MPIFilterCoeff](#) | [MEIFilterGainTypePIV](#) | [MEIFilterGainPID](#) | [MEIDataType](#) | [MPIFilterGain](#)

MEIFilterGainTypePIV

Definition

```
static MEIDataType MEIFilterGainTypePIV[MPIFilterCoeffCOUNT_MAX] =
{
    MEIDataTypeFLOAT, /* Kpp           */
    MEIDataTypeFLOAT, /* Kip           */

    MEIDataTypeFLOAT, /* Kpv           */

    MEIDataTypeFLOAT, /* Kpff          */
    MEIDataTypeFLOAT, /* Kvff          */
    MEIDataTypeFLOAT, /* Kaff          */
    MEIDataTypeFLOAT, /* Kfff          */

    MEIDataTypeFLOAT, /* MovingIMax    */
    MEIDataTypeFLOAT, /* RestIMax     */

    MEIDataTypeFLOAT, /* Kdv           */

    MEIDataTypeFLOAT, /* OutputLimit   */
    MEIDataTypeFLOAT, /* OutputLimitHigh */
    MEIDataTypeFLOAT, /* OutputLimitLow  */
    MEIDataTypeFLOAT, /* OutputOffset   */

    MEIDataTypeFLOAT, /* Kiv           */
    MEIDataTypeFLOAT, /* Vintmax       */
    MEIDataTypeFLOAT, /* Ka0           */
    MEIDataTypeFLOAT, /* Ka1           */
    MEIDataTypeFLOAT, /* Ka2           */
};
```

Description

MEIFilterGainTypePIV is a static array that describes the data type of the coefficients for the PIV algorithm. Specifically, an element of MEIFilterGainTypePIV describes which member of the union MPIFilterCoeff to access when using the data structure MPIFilterCoeff.

MEIFilterGainTypePIV allows for a more simple design of general case utilities and configuration routines. If it is known that only the PIV parameters will be used, then the data structure MEIFilterGainPIV can be used directly without having to manipulate MPIFilterCoeff, MPIFilterCoeff, and MEIFilterGainTypePIV.

Sample Code

```

/*  Read the current value of a filter's PIV coefficient.  Sample usage:

    returnValue =
        getPivFilterCoeff(filter, MEIFilterGainPIVCoeffGAINVELOCITY_PROPORTIONAL,
&kpv);
*/
long getPivFilterCoeff(MPIFilter filter, long index, double* value)
{
    MPIFilterConfig config;
    long returnValue = (value==NULL) ? MPIMessageARG_INVALID : MPIMessageOK;

    if (returnValue == MPIMessageOK)
    {

        returnValue = mpiFilterConfigGet(filter, &config, NULL);

        if (returnValue == MPIMessageOK)
        {
            switch(MEIFilterGainTypePIV[index])
            {
                case MEIDataTypeLONG:
                    *value = config.gain[config.gainIndex].coeff[index].l;
                    break;
                case MEIDataTypeFLOAT:
                    *value = config.gain[config.gainIndex].coeff[index].
f;

                    break;
                default:
                    returnValue = MPIMessageARG_INVALID;

            }
        }
    }

    return returnValue;
}

```

See Also

[MPIFilterCoeff](#) | [MEIFilterGainTypePID](#) | [MEIFilterGainPIV](#) | [MEIDataType](#) | [MPIFilterGain](#)

MPIFilterMessage

Definition

```
typedef enum {
    MPIFilterMessageFILTER_INVALID,
    MPIFilterMessageINVALID_ALGORITHM,
    MPIFilterMessageINVALID_DRATE,
    MPIFilterMessageCONVERSION_DIV_BY_0,
    MPIFilterMessageSECTION_NOT_ENABLED,
    MPIFilterMessageINVALID_FILTER_FORM,
} MPIFilterMessage;
```

Description

MPIFilterMessage is an enumeration of Filter error messages that can be returned by the MPI library.

MPIFilterMessageFILTER_INVALID

The filter number is out of range. This message code is returned by [mpiFilterCreate\(...\)](#) if the filter number is less than zero or greater than or equal to MEIXmpMAX_Filters.

MPIFilterMessageINVALID_ALGORITHM

The filter algorithm is not valid. This message code is returned by [mpiFilterIntegratorReset\(...\)](#) if the filter algorithm is not a member of the MEIXmpAlgorithm enumeration (does not support integrators). This problem occurs if the filter type is set to user or an unknown type with [mpiFilterConfigSet\(...\)](#).

MPIFilterMessageINVALID_DRATE

The filter derivative rate is not valid. This message code is returned by [mpiFilterConfigSet\(...\)](#) if the filter derivative rate is less than 0 or greater than 7.

NOTE: The derivative rate for all gain tables must be in the range [0,7], not just the derivative rate for the current gain table.

MPIFilterMessageCONVERSION_DIV_BY_0

Returned when [meiFilterPostfilterGet\(...\)](#) or [meiFilterPostfilterSectionGet\(...\)](#) cannot convert digital coefficients to analog coefficients. When this error occurs, the offending section(s) will report its type as MEIFilterTypeUNKNOWN and will not contain any analog data.

MPIFilterMessageSECTION_NOT_ENABLED

Returned when [meiFilterPostfilterGet\(...\)](#) or [meiFilterPostfilterSectionGet\(...\)](#) attempt to read postfilter data when no postfilter sections are enabled.

MPIFilterMessageINVALID_FILTER_FORM

Returned when [meiFilterPostfilterGet\(...\)](#) or [meiFilterPostfilterSectionGet\(...\)](#) cannot interpret the current postfilter's form (when the form is something other than NONE, IIR, or BIQUAD).

See Also

[mpiFilterCreate](#)

MEIFilterType

Definition

```
typedef enum {
    MEIFilterTypeUNITY_GAIN,
        /* B0 = 1      B1=B2=A1=A2 = 0
           (effectively acting as no filter) */
    MEIFilterTypeSINGLE_ORDER,
    MEIFilterTypeLOW_PASS,
    MEIFilterTypeHIGH_PASS,
    MEIFilterTypeNOTCH,
    MEIFilterTypeRESONATOR,
    MEIFilterTypeLEAD_LAG,
    MEIFilterTypeZERO_GAIN,
        /* b0=b1=b2=a1=a2 = 0
           (this does act as a filter.... zeroing the output) */
    MEIFilterTypeBIQUAD,
        /* Only valid for setting.
           Reading will not return these types */
    MEIFilterTypeDIGITAL_BIQUAD,
    MEIFilterTypePOLES_ZEROS,
    MEIFilterTypeDIGITAL_POLES_ZEROS,
    MEIFilterTypeUNKNOWN,
        /* algorithm couldn't figure out what
           this filter was from the coeffs! */
} MEIFilterType;
```

Description

NOTE: The MPI will attempt to return analog & digital biquad and pole/zero information from [meiFilterPostfilterGet\(...\)](#) and [meiFilterPostfilterSectionGet\(...\)](#). However, the filter types MEIFilterTypeDIGITAL_BIQUAD, MEIFilterTypePOLES_ZEROS, and MEIFilterTypeDIGITAL_POLES_ZEROS are never returned by get() calls -- they are used only for setting postfilters. MEIFilterTypeBIQUAD will only be returned by meiFilterPostfilterGet(...) and meiFilterPostfilterSectionGet(...) if the analog coefficients can be calculated (there is no division by 0) and the section cannot be identified as one of the other analog filter types.

MEIFilterTypeUNITY_GAIN	A unity gain filter. This effectively performs no filtering.
MEIFilterTypeSINGLE_ORDER	A single order filter
MEIFilterTypeLOW_PASS	A low pass filter
MEIFilterType_HIGH_PASS	A high pass filter.
MEIFilterTypeNOTCH	A notch filter
MEIFilterTypeRESONATOR	A resonator filter.
MEIFilterTypeLEAD_LAG	A lead or lag filter.
MEIFilterTypeZERO_GAIN	Zeros the output of a filter.
MEIFilterTypeBIQUAD	An analog biquad filter. When reading postfilter data, this type means that the postfilter section could not be identified as a standard filter type.
MEIFilterTypeDIGITAL_BIQUAD	A digital biquad filter. This is only used for setting postfilter sections.
MEIFilterTypePOLES_ZERO	Analog poles and zeros filter (maximum of two poles and zeros) with unity zero-frequency amplitude. This is only used for setting postfilter sections.
MEIFilterTypeDIGITAL_POLES_ZEROS	Digital poles and zeros filter (maximum of two poles and zeros) with unity zero-frequency amplitude. This is only used for setting postfilter sections.
MEIFilterTypeUNKNOWN	Returned by <code>meiFilterPostfilterGet(...)</code> and <code>meiFilterPostfilterSectionGet(...)</code> if analog coefficients cannot be found. only digital data will be available.

See Also

[MEIPostfilterSection](#) | [meiFilterPosterfilterGet](#) | [meiFilterPosterfilterSet](#) | [meiFilterPosterfilterSectionGet](#) | [meiFilterPosterfilterSectionSet](#)

MEIPostfilterSection

Definition

```

typedef struct MEIPostfilterSection {
    MEIFilterType    type;
    MEIFilterForm   form;
    struct {
        struct {
            double breakPoint;    /* Hz */
        } lowPass;

        struct {
            double breakPoint;    /* Hz */
        } highPass;

        struct {
            double centerFrequency; /* Hz */
            double bandwidth;      /* Hz */
        } notch;

        struct {
            double centerFrequency; /* Hz */
            double bandwidth;      /* Hz */
            double gain;           /* dB */
        } resonator;

        struct {
            double lowFrequencyGain; /* dB */
            double highFrequencyGain; /* dB */
            double centerFrequency; /* Hz */
        } leadLag;

        struct {
            double a1;
            double a2;
            double b0;
            double b1;
            double b2;
        } biquad;

        struct {
            double a1;
            double a2;
            double b0;
            double b1;
            double b2;
        } digitalBiquad;
    }

```

```

struct {
    long poleCount;
    long zeroCount;
    struct {
        double real;
        double imag;
    } pole[2];
    struct {
        double real;
        double imag;
    } zero[2];
} polesZeros;

struct {
    long poleCount;
    long zeroCount;
    struct {
        double real;
        double imag;
    } pole[2];
    struct {
        double real;
        double imag;
    } zero[2];
} digitalPolesZeros;


struct {
    double d1;
    double c1;
    double c2;
    double a2;
    double a1;
    double b1;
} stateSpaceBiquad;
} data;
} MEIPostfilterSection;


```

Description

MEIPostfilterSection holds the configuration data for a single section of an MPIFilter object's postfilter. The MPI calculates the post filter coefficients and takes into consideration the sample rate of the controller at that time. If you change the sample rate of the controller, you will need to recalculate the post filters. This can be done for all filters specified in Hertz by setting the filters again with the MPI. The MPI will calculate the filters using the current servo sample rate.

Postfilters are used to digitally filter the output of a control loop. One common use for postfilters is the compensation of system resonances.

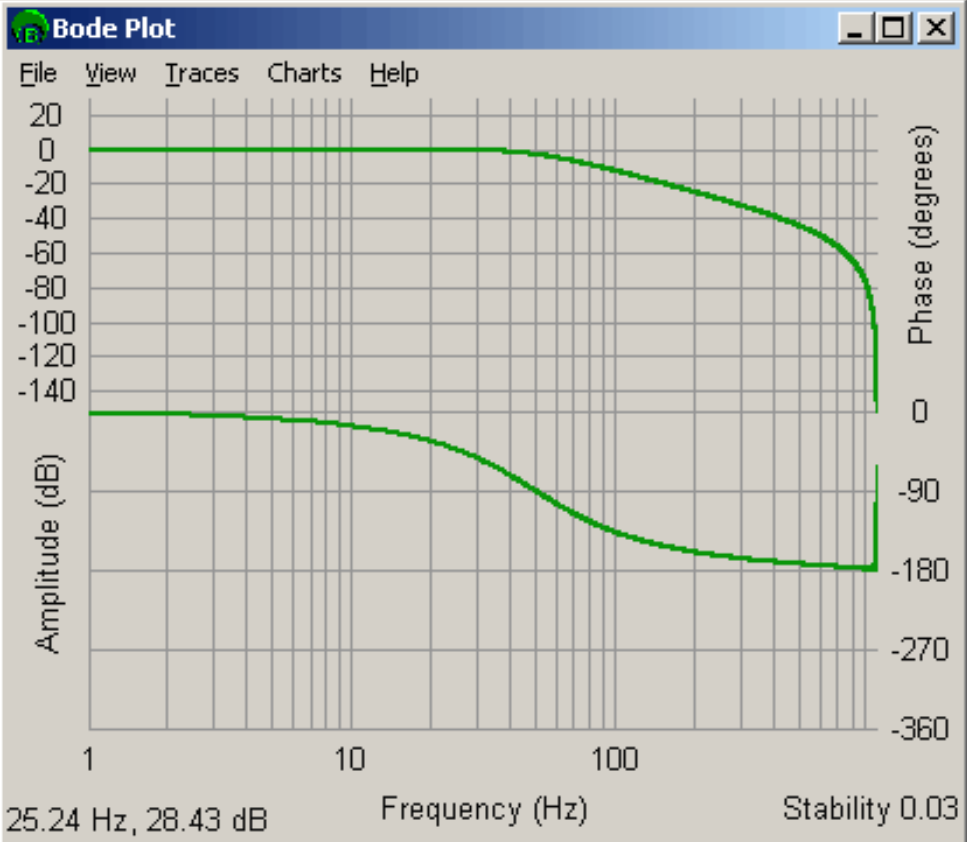
type	The postfilter section type. This field determines which field of the MEIPostfilterSection.data union is used by meiFilterPostfilter.() methods. More information about particular filter types can be found below and in the MEIFilterType documentation.
form	The form of a postfilter section. The form determines how a particular postfilter section is calculated on the controller. All forms have certain limitations and tradeoffs. Please refer to MEIFilterForm for more information.
lowPass.breakpoint	<p>The break point (measured in Hertz) of a low pass postfilter section.</p>  <p>Example of a 50 Hz low pass filter.</p>
highPass.breakpoint	The break point (measured in Hertz) of a high pass postfilter section.

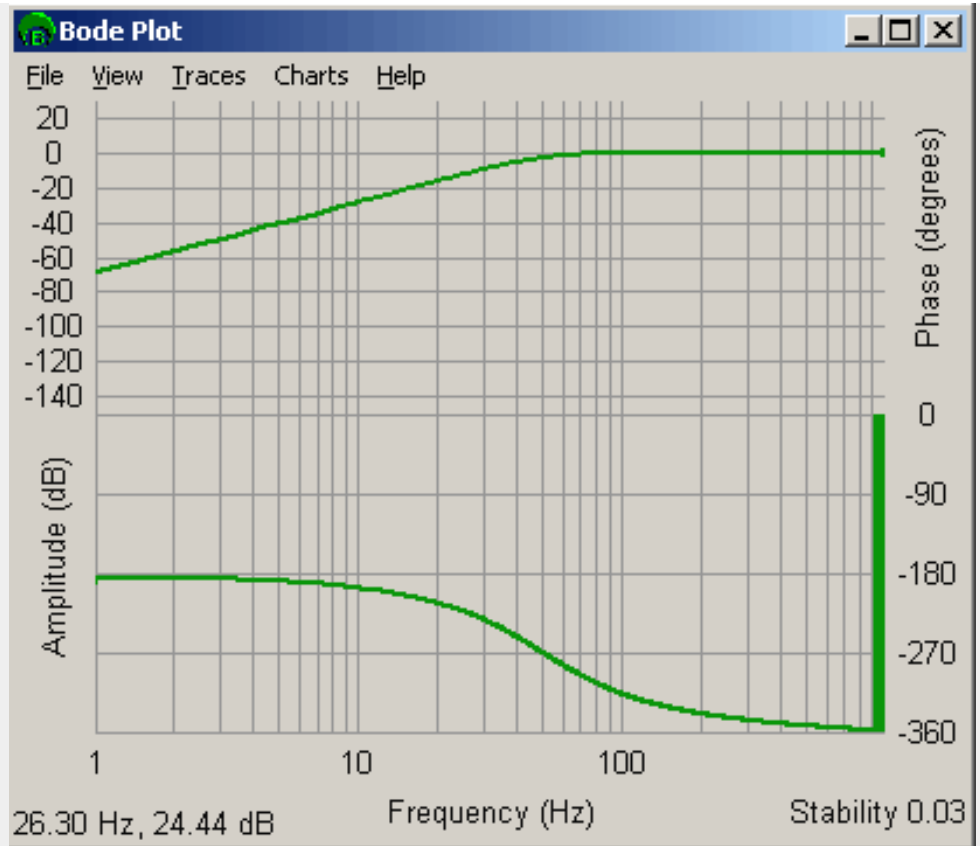

Example of a 50 Hz High pass filter

**notch.
centerFrequency**

The center frequency (measured in Hertz) of a notch postfilter section.

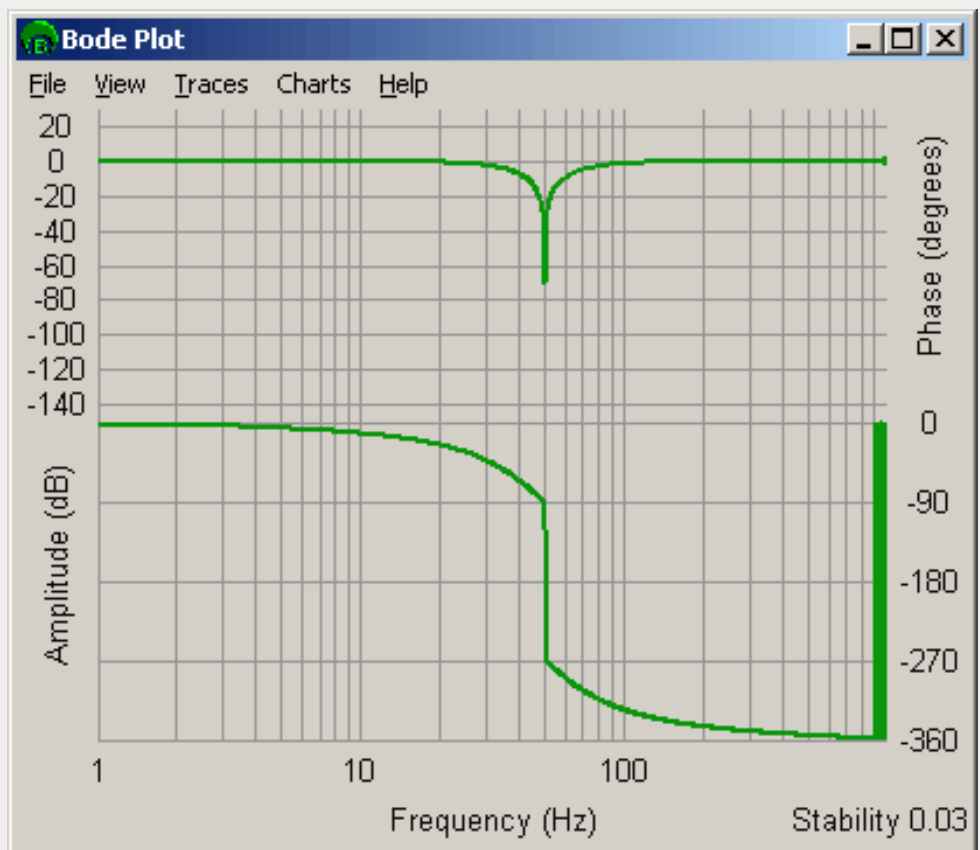


Example of a 50 Hz Center / 50 Hz Bandwidth Notch filter. Note that phase wrapping gives the illusion that phase drops 180 degrees after the center frequency. The

phase raises by 180 degrees.

notch.bandwidth


The bandwidth (measured in Hertz) of a notch postfilter section.

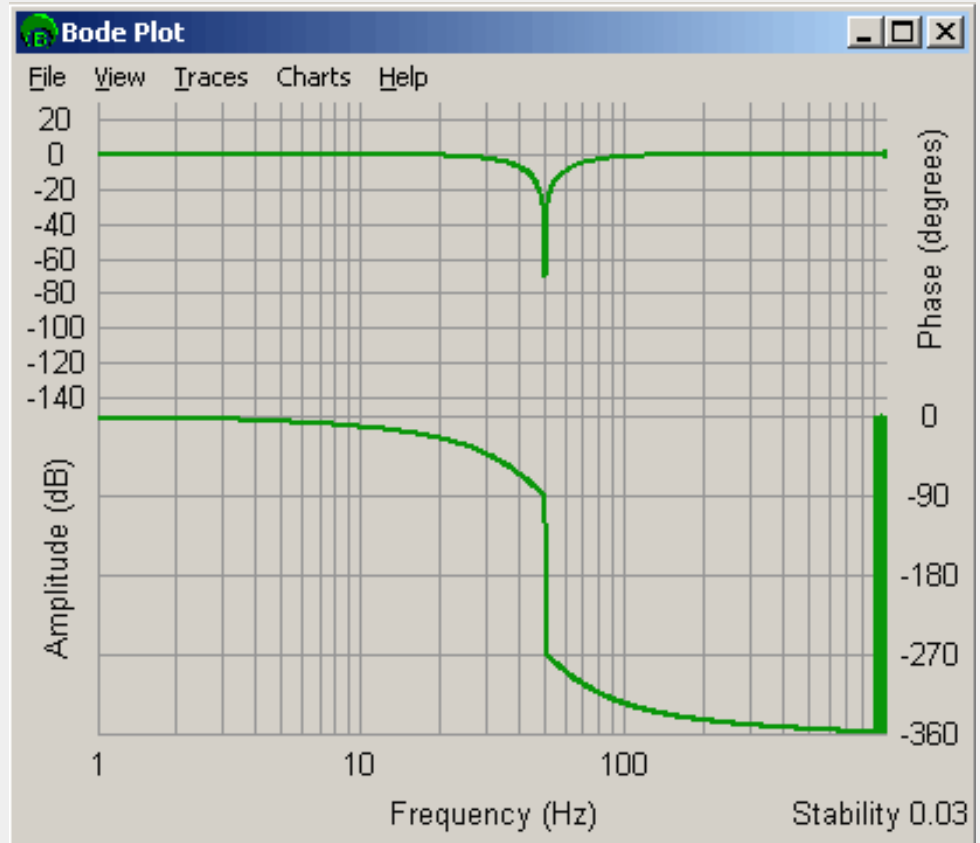

Example of a 50 Hz Center / 50 Hz Bandwidth Notch filter. Note that phase wrapping gives the illusion that phase drops 180 degrees after the center frequency. The phase raises by 180 degrees.

**resonator.
centerFrequency**


The center frequency (measured in Hertz) of a resonator postfilter section.

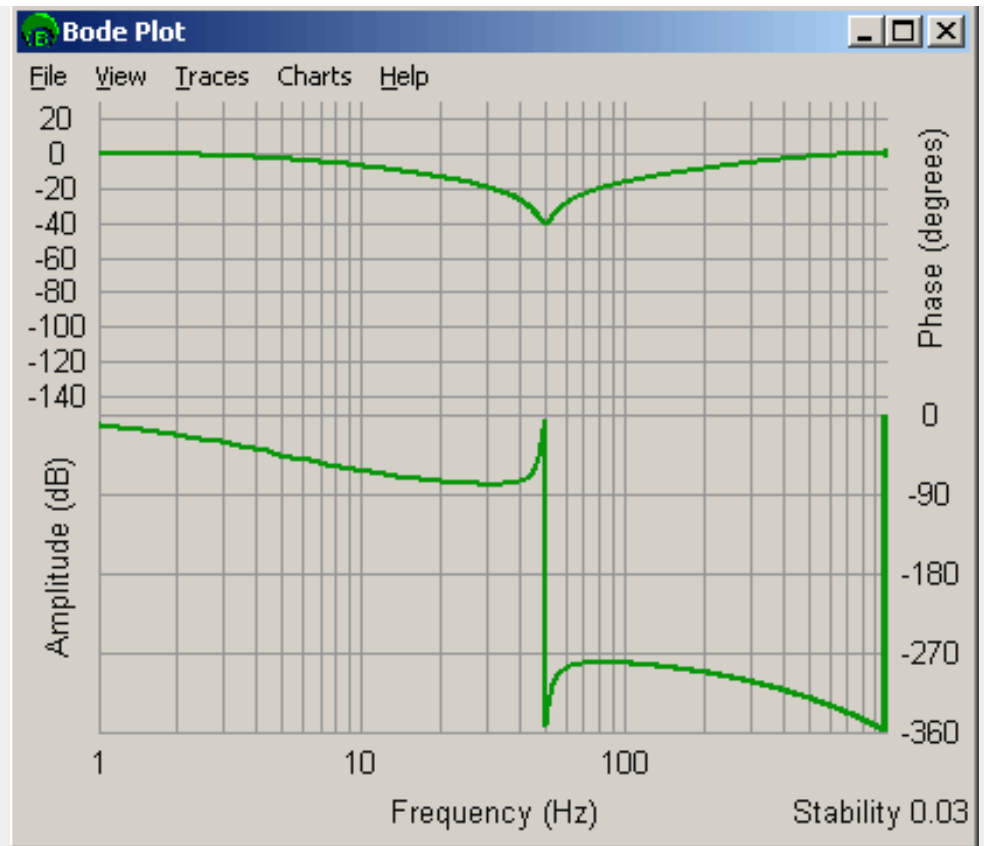

Example of a 50 Hz center / 50 Hz Bandwidth / -40 dB Gain Resonator filter. Note that phase wrapping gives the illusion that the phase drops 360 degrees after the center frequency.

resonator. bandwidth


The bandwidth (measured in Hertz) of a resonator postfilter section.

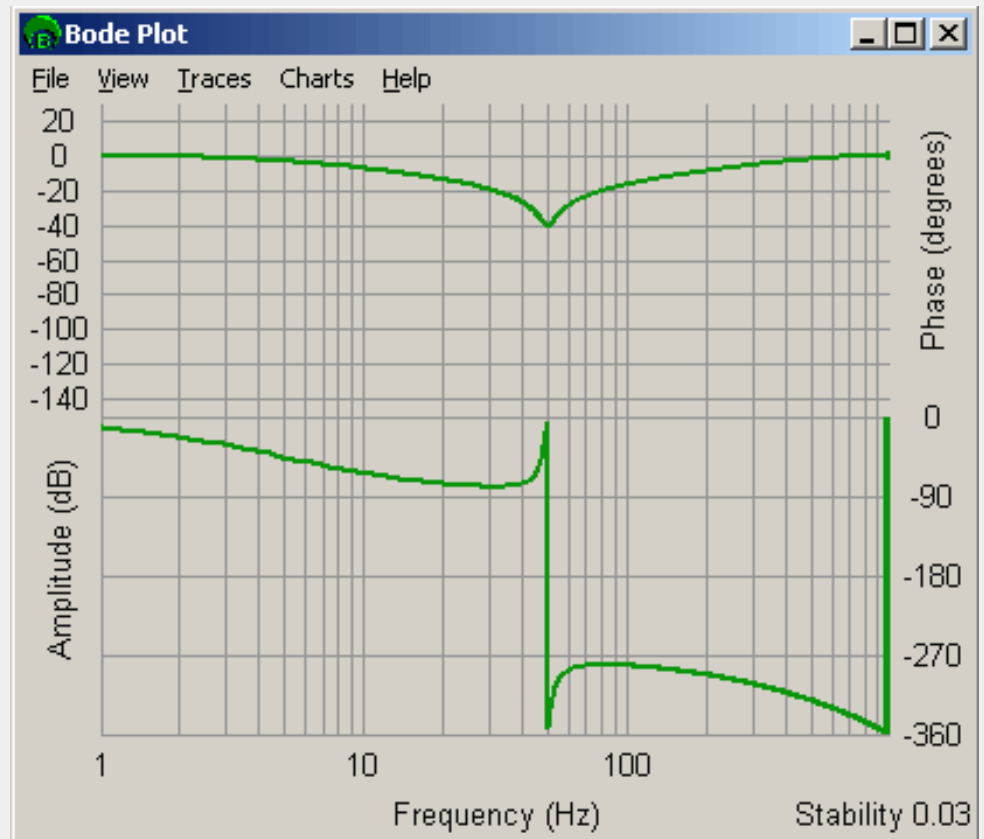

Example of a 50 Hz center / 50 Hz Bandwidth / -40 dB Gain Resonator filter. Note that phase wrapping gives the illusion that the phase drops 360 degrees after the center frequency.

resonator.gain

The center frequency gain (measured in dB) of a resonator postfilter section.

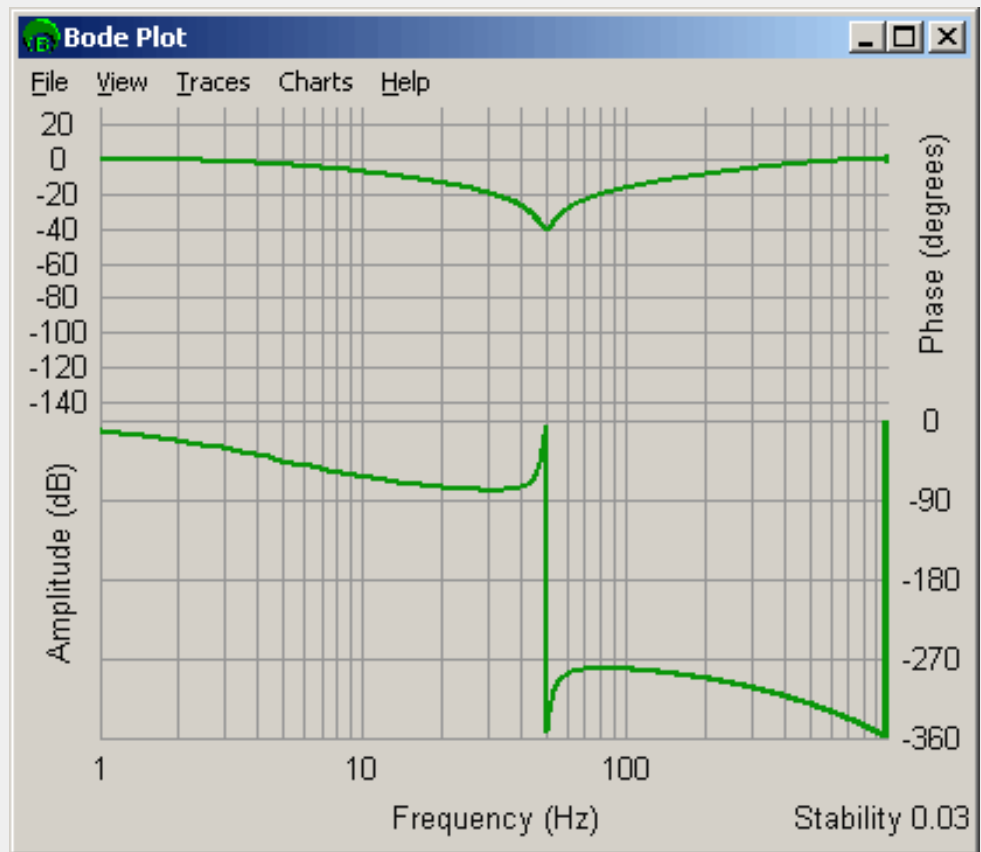


Example of a 50 Hz center / 50 Hz Bandwidth / -40 dB Gain Resonator filter. Note that phase wrapping gives the illusion that the phase drops 360 degrees after the center frequency.

**leadLag.
centerFrequency**

The center frequency (measured in Hertz) of a lead or lag postfilter section. The amplitude at this frequency is the average amplitude of the low and high frequency amplitudes. The gain (measured in dB) at this point is given by:


$$centerFrequencyGain = 20 \cdot \log_{10} \left(\frac{10^{\frac{lowFrequencyGain}{20}} + 10^{\frac{highFrequencyGain}{20}}}{2} \right)$$

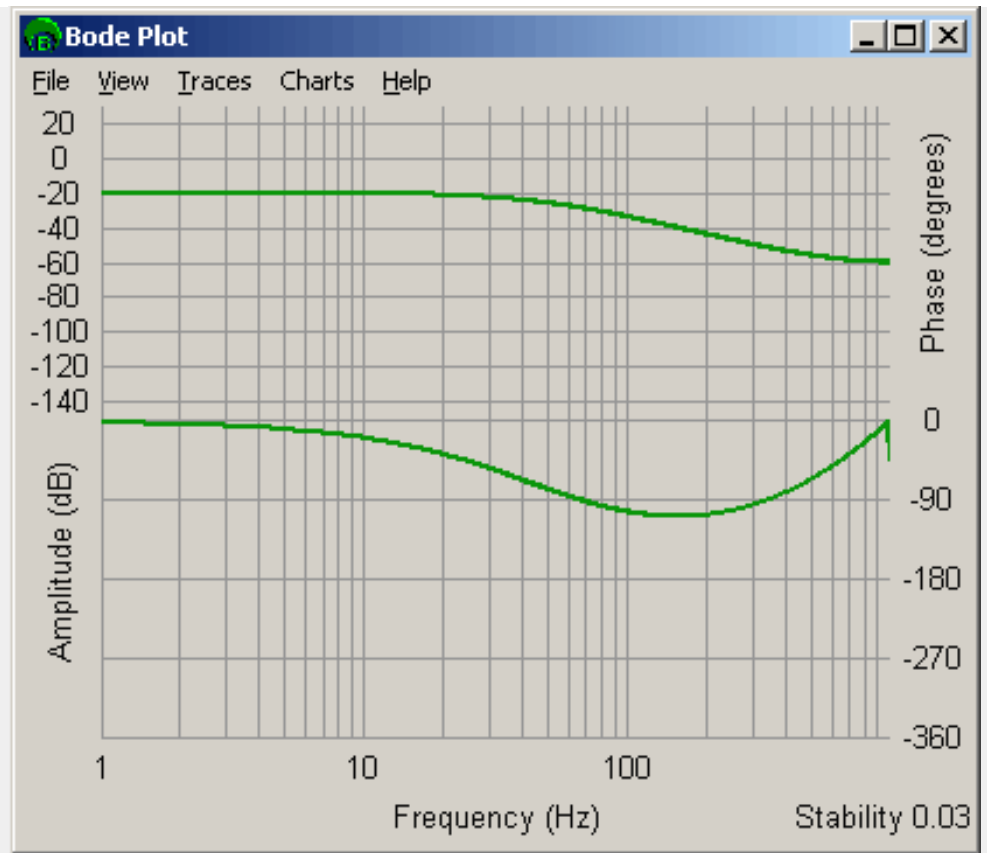

Example of a -20 dB low frequency gain / -60 dB high frequency gain / 50 Hz center lead lag filter.

**leadLag.
lowFrequencyGain**


The low frequency gain (measured in dB) of a lead or lag postfilter section.

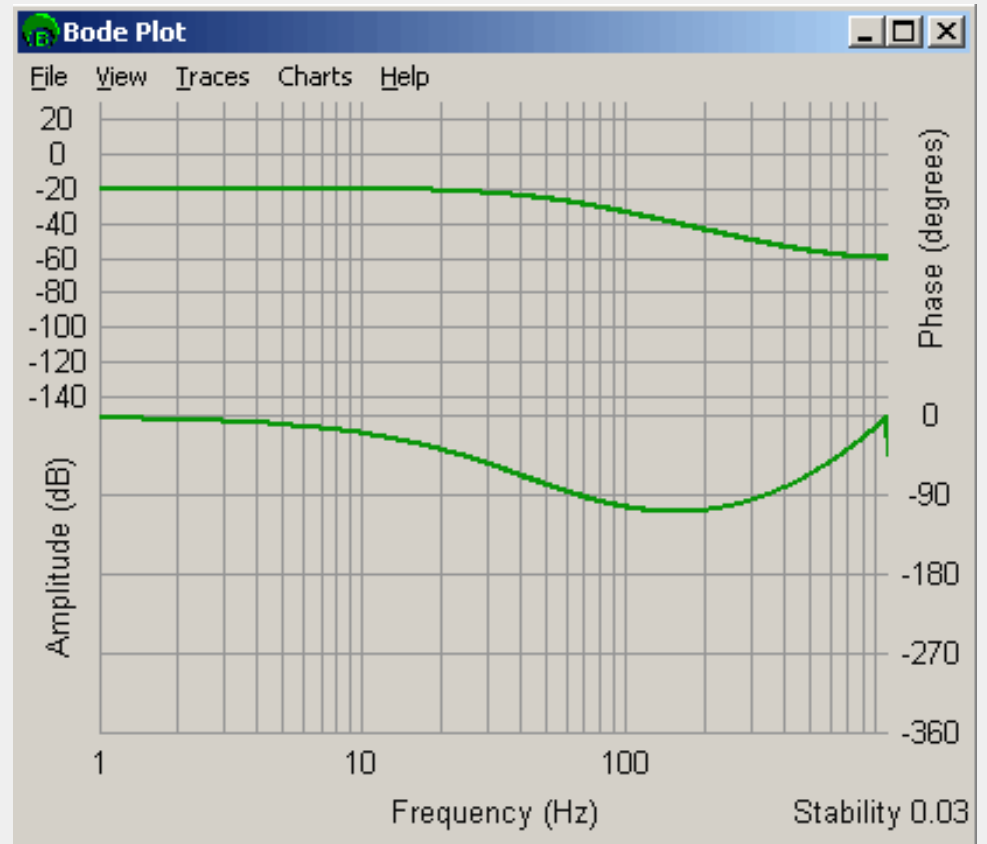

Example of a -20 dB low frequency gain / -60 dB high frequency gain / 50 Hz center lead lag filter.

**leadLag.
highFrequencyGain**

The high frequency gain (measured in dB) of a lead or lag postfilter section.

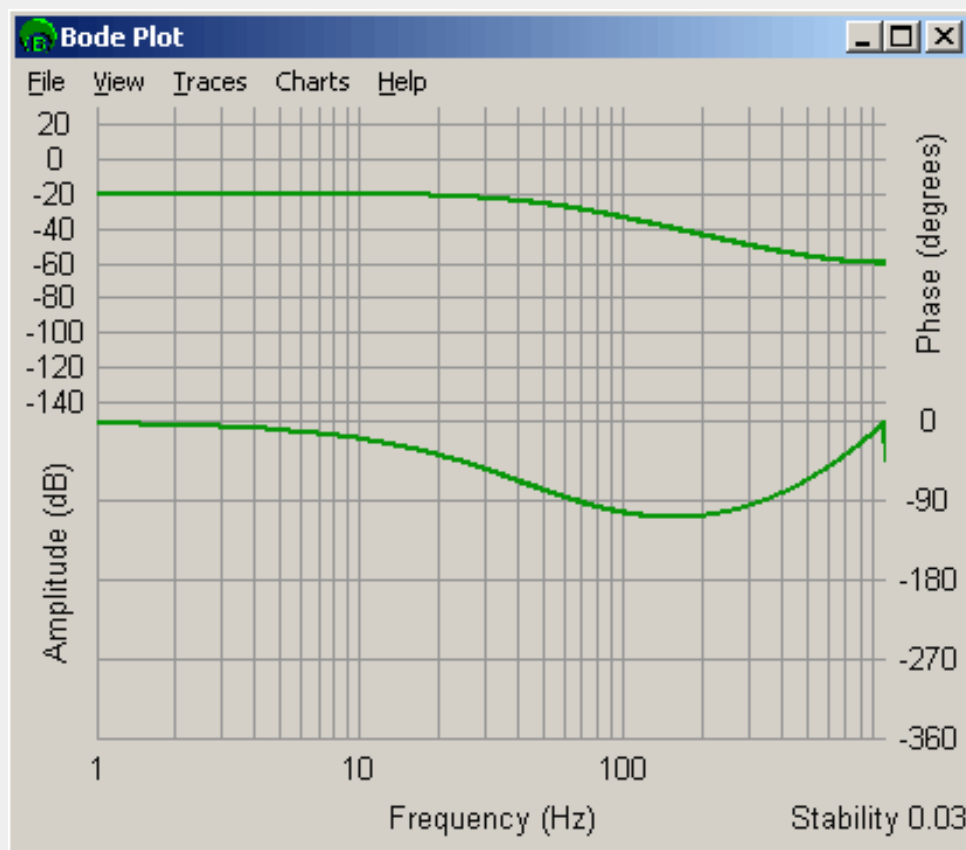

Example of a -20 dB low frequency gain / -60 dB high frequency gain / 50 Hz center lead lag filter.

biquad.a1

The analog coefficients of a single order or bi-quad postfilter section.

Analog values of the postfilter coefficients are produced as parts of a Laplace Transform:

biquad.a2

biquad.b0

$$H(s) = \frac{b_0 + b_1 \cdot s + b_2 \cdot s^2}{1 + a_1 \cdot s + a_2 \cdot s^2} \text{ where } s = j \cdot \omega_{\text{warped}}$$

biquad.b1

and

biquad.b2

$$\omega_{\text{warped}} = 2 \cdot \text{sampleRate} \cdot \tan\left(\frac{\pi \cdot f}{\text{sampleRate}}\right)$$

digitalBiquad.a1

digitalBiquad.a2

digitalBiquad.b0	The digital coefficients of a single order or bi-quad postfilter section.
digitalBiquad.b1	
digitalBiquad.b2	
digitalBiquad.d1	The digital coefficients of a state-space bi-quad postfilter section.
digitalBiquad.c1	
digitalBiquad.c2	
digitalBiquad.a2	
digitalBiquad.a1	
digitalBiquad.b1	
polesZeros.poleCount	Analog poles and zeros.
polesZeros.zeroCount	
polesZeros.pole[].real	
polesZeros.pole[].imag	
digitalPolesZeros.poleCount	Digital poles and zeros.
digitalPolesZeros.zeroCount	
digitalPolesZeros.pole[].real	
digitalpolesZeros.pole[].imag	
stateSpaceBiquad.d1	State space coefficients.
stateSpaceBiquad.c1	
stateSpaceBiquad.c2	
stateSpaceBiquad.a2	
stateSpaceBiquad.a1	
stateSpaceBiquad.b1	

Sample Code

```
/* Set a 4th order low-pass post-filter by using two
   2nd order low-pass sections.
   Sample usage:

   returnValue =
       fourthOrderLowPass(filter, 300 /* Hz */);
*/
long filterFouthOrderLowpass(MPIFilter filter, long breakPointFrequency)
{
    MPIFilterConfig config;
    MEIPostfilterSection sections[2];
    long returnValue;

    section[0].type = MEIFilterTypeLOW_PASS;
    section[0].form = MEIFilterFormINT_BIQUAD;
    section[0].lowPass.breakpoint = breakPointFrequency;
    section[1] = section[0]; /* copy first section */

    returnValue =
        meiFilterPostfilterSet(filter, 2, sections);

    return returnValue;
}
```

See Also

[MEIFilterType](#) | [MEIFilterForm](#) | [MEIMaxIIRCoefficients](#) | [meiFilterPostfilterGet](#) | [meiFilterPostfilterSet](#) | [meiFilterPostfilterSectionGet](#) | [meiFilterPostfilterSectionSet](#) | [Post Filter Theory](#)

MPIFilterCoeffCOUNT_MAX

Definition

```
#define MPIFilterCoeffCOUNT_MAX (20)
```

Description

MPIFilterCoeffCOUNT_MAX is a constant that defines the maximum number of filter coefficients contained in a gain table.

See Also

[MPIFilterCoeff](#)

MPIFilterGainCOUNT_MAX

Definition

```
#define MPIFilterGainCOUNT_MAX (5)
```

Description

MPIFilterGainCOUNT_MAX is a constant that defines the maximum number of filter gain tables. The first gain table is used by the standard filter types (all filter types except for the user filter type as defined by the structure MEIXmpAlgorithm). Additional gain tables can be used for manual or automatic gain switching. For firmware that implements automatic gain switching, please [contact MEI](#). Manual gain switching can be accomplished by specifying the gainIndex of the mpiFilterConfig structure using the mpiFilterConfigSet method. Valid gainIndex values range from 0 to MPIFilterGainCOUNT_MAX.

See Also

[MPIFilterGain](#)

MEIMaxBiQuadSections

Definition

```
#define MEIMaxBiQuadSections (6)
```

Description

MEIMaxBiQuadSections is the maximum number of Bi-Quad sections a postfilter can use.

NOTE: The PIV algorithm uses the last Bi-Quad section internally. Thus a user can only use (MEIMaxBiQuadSections - 1) Bi-quad sections with the PIV algorithm.

See Also

[MEIPostFilterSection](#) | [meiFilterPostfilterGet](#) | [meiFilterPostfilterSet](#) | [meiFilterPostfilterSectionGet](#) | [meiFilterPostfilterSectionSet](#)